

# Manual

---

Mobile terminal + GUN  
holder

**AndroSavvy-100G**

# Table of contents

- Specification:..... 3
- Set contents:..... 5
- Buttons:..... 5
- Icons: ..... 6
- Enabling and Configuration:.....7
- Battery replacement: .....7
- Battery:.....7
- Safety measures:..... 8

## Specification:


- **Warranty:** 1 year
- **Color:** Black
- **Operating system:** Android 12.0
- **Processor:** MTK6765 octa core 2.3GHz
- **Memory:** 4GB/64GB
- **Display:** 5 inch IPS 16:9, 1280\*720
- **Display glass type:** 5-point GFF capacitive touch screen, Gorilla Glass 3
- **LED:** Charging, Scanning, and System States
- **Camera:** 8 Mega auto focus with LED flash
- **Speaker:** Minimum 90db at 10cm-1KHz
- **Microphone:** Noise-canceling microphone
- **Keyboard and keys:** touch keyboard + 3 function keys
- **Keyboard lifecycle:** 300 thousand clicks
- **Sensors:** Proximity, Light, Gravity, 3D gyroscope, E-compass
- **Communication:** WiFi 802.11 a/b/g/n/ac (2.4G+5G), Bluetooth 5.0
- **Wireless Network:** TDD-LTE, FDD-LTE, WCDMA, GSM
- **Computer Communication:** USB 2.0 OTG : Type-C ; Supports TYPE-C headphones
- **Code scanner:** built-in 2D code scanner
- **Software language:** Polish/ English
- **Interface:** USB Type-C
- **Slot expansion:** MicroSD, SDHC support up to 512GB, two micro SIM slots
- **Battery Capacity:** Removable 4000mAh Battery
- **Charging Time:** 3 hours
- **Working Time:** 12 hours
- **Device dimensions:** 16.5 × 7.6 × 1.6 cm

- **Package dimensions:** 20.5 x 14.5 x 13.5 cm
- **Device weight:** 260 g
- **Weight with packaging:** 500 g
- **Operating temperature:** -20 to 50°C
- **Storage temperature:** -30 to 70°C
- **Operating Humidity:** 5 to 95%
- **Drop resistance:** multiple drops to concrete from a height of 1.5 m in a reinforced protector in accordance with MIL STD 810 G
- IP67, MIL-STD 810G
- **ESD:** ±8kV contact discharge, ±15kV air discharge
- **Readable 1D codes:** UPC/EAN, Code128, Code39, Code93, Code11, Interleaved 2 of 5, Discrete 2 of 5, Chinese 2 of 5, Codabar, MSI, RSS, etc.
- **Readable 2D codes:** PDF417, MicroPDF417, Composite, RSS, TLC-39, Datamatrix, QR code, Micro QR code, Aztec, MaxiCode, Postal Codes: US PostNet, US Planet, UK Postal, Australian Postal, Japan Postal, Dutch Postal (KIX), etc.

## Set contents:

- Mobile Terminal
- GUN handle,
- adapter
- USB cable,
- Manual.

## Buttons:

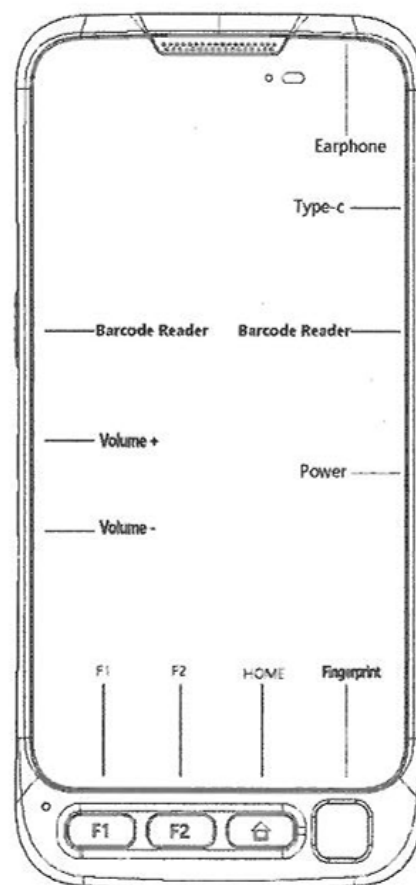



















**F1:** Long or short press can open the pre-installed program. If you want to change the assigned program, go to settings -> keyEvent -> physics button F1 to make the change.

**F2:** Long or short press can open the pre-installed program. If you want to change the assigned program, go to settings -> keyEvent -> physics button F2 to make the change.

**Physical Home Button:** A short press takes you directly to the home screen.

**Fingerprint Sensor:** Can be used to unlock the device or wake up the locked interface. Go to settings -> suggestions -> screen lock to set up.

Icons:

	E: GSM 3G: WCDMA 4G: 4G LTE		Notification
	Call forwarding		Play music
	Miss calling		Connected WLAN
	New SMS or MMS		Calling out
	Alarm Clock		Airplane mode
	Vibration mode		Silent
	Bluetooth		Battery capacity
	Connect to PC		Barcode reader on
	Connected earphone		Charging

## Enabling and Configuration:

1. Turn on the terminal by holding down the main power button.
2. On the touchscreen, select language.
3. Connect your device to WiFi, Bluetooth, or cellular (TDD-LTE, FDD-LTE, WCDMA, GSM) for full functionality.

## Battery replacement:

1. Turn off the device.
2. Open the battery compartment and remove the used battery.
3. Insert a new 4800mAh battery, making sure it is properly mounted.
4. Turn on the terminal.

## Battery:

- It is recommended that you charge the battery before using the product. A new battery will not reach optimal performance before several full charge and discharge cycles.
- A battery can be charged and discharged hundreds of times, but it will become unusable over time. When the battery life is significantly reduced, you should replace it with a new one.
- Use only company-approved batteries and a company-recommended charger for battery charging.
- When the charger is not in use, turn off the power. Do not

connect the battery to the charger for more than a week, as overcharging will shorten the battery life. If a fully charged battery is left unused, it will also start to discharge.

- Too high or too low a temperature will affect the battery charging process. Before charging, the battery must be properly cooled or warmed.

### Safety measures:

- The battery of this product must only be charged with the specified charger. Using other chargers may cause the battery to heat up, explode, and cause a fire. This product is only suitable for areas with an altitude of 2000 meters and below.
- If the product is hot or starts to emit an unpleasant odor, please turn off the power immediately, unplug the power adapter, remove the battery, and contact our after-sales service center. Continued use of the appliance may result in fire and electric shock.
- Do not attempt to disassemble or modify the battery in any way, as this will damage the battery and cause malfunction or damage to the main unit.
- Do not touch internal high-voltage components or components. Doing so may result in electric shock.
- You should never look directly at the laser beam as this can seriously damage your eyes.
- Keep the appliance away from vases, flower pots, porcelain cups, glasses and other containers with water and metal. Water and metal ingress into the product may cause fire, electric shock, and damage to the product.