

User Manual

Mobile computer,
courier terminal, Android

10.0

AndroSavvy-200

Table of contents

- Specifications: 3
- Set contents:..... 5
- Function buttons:..... 5
- Install SIM card, TF card:7
- Battery:..... 8
- Status icons:..... 8
- Apps and notifications:..... 9
- Homepage Management:.....10
- Move the home page interface icons:.....10
- Wireless and networked:.....10
- SIM Card Application:..... 11
- Wi-Fi:..... 11
- Bluetooth: 11
- Hot spot and tetfering: 11

Specifications:

 
- **Warranty:** 1 year
- **Color:** Black
- **Operating system:** Android 10.0
- **Processor:** MTK6761 quad core 2GHz
- **Memory:** 4GB/64GB
- **Display:** 5 inch IPS 16:9, 1280*720
- **Display Type:** 5-point GFF capacitive touchscreen, Gorilla Glass 3
- **LED:** Charging, Scanning, and System States
- **Camera:** 8 Mega auto focus with LED flash
- **Speaker:** Minimum 90db at 10cm-1KHz
- **Microphone:** Noise-canceling microphone
- **Keyboard and keys:** Touch keyboard + 3 side function keys
- **Keyboard lifecycle:** 300 thousand clicks
- **Sensors:** Proximity, Light, Gravity, 3D Accelerometer
- **Communication:** WiFi 802.11 a/b/g/n/ac (2.4G+5G), Bluetooth 4.2
- **Wireless Network:** TDD-LTE, FDD-LTE, WCDMA, GSM
- **Computer Communication:** USB 2.0 OTG : Type-C ; Supports Type-C input headphones
- **Code scanner:** built-in 2D code scanner
- **Software language:** Polish/ English
- **Interface:** USB Type-C
- **Slot expansion:** MicroSD, support SDHC up to 128GB
- **Battery Capacity:** Removable 3900mAh Battery
- **Charging Time:** 3 hours
- **Working Time:** 12 hours
- **Device dimensions:** 16.5 × 7.8 × 2.3 cm
- **Package dimensions:** 20.5 x 11 x 5.5 cm

- **Device weight:** 330 g
- **Weight with packaging:** 450 g
- **Operating temperature:** -20 to 50°C
- **Storage temperature:** -30 to 70°C
- **Operating Humidity:** 5 to 95%
- **Drop resistance:** multiple drops to concrete from a height of 1.5 m in a reinforced protector in accordance with MIL STD 810 G
- IP65, MIL-STD 810G
- **ESD:** ±8kV contact discharge, ±15kV air discharge
- **Readable 1D codes:** UPC/EAN, Code128, Code39, Code93, Code11, Interleaved 2 of 5, Discrete 2 of 5, Chinese 2 of 5, Codabar, MSI, RSS, etc.
- **Readable 2D codes:** PDF417, MicroPDF417, Composite, RSS, TLC-39, Datamatrix, QR code, Micro QR code, Aztec, MaxiCode, Postal Codes: US PostNet, US Planet, UK Postal, Australian Postal, Japan Postal, Dutch Postal (KIX), etc.

Set contents:

- Mobile Terminal
- Adapter
- USB cable
- Manual

Function buttons:

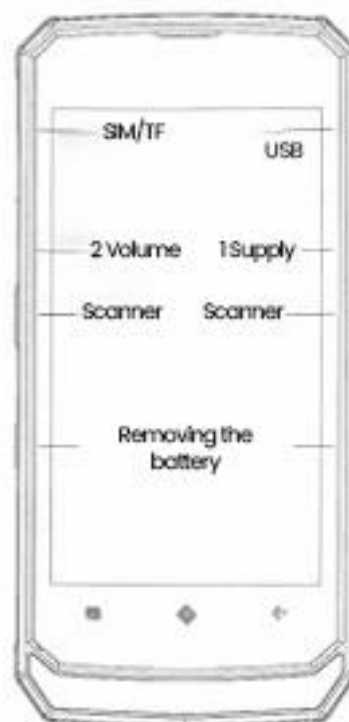

1.1 **Power button:**

- Press and hold the power button to turn on the device.
- Once enabled, it will take some time to complete some settings such as language, time zone, WiFi, and so on.
- On any interface, press the power button for one second to lock and unlock the device.
- Press and hold the power button on the bar to select shutdown, restart, screenshot, or crashes.

1.2 **Volume button:**

- Press the volume button to adjust the volume to play music, radio or video (the volume button si can be adjusted according to the circulating volume)
- Press the volume button to adjust the volume bar to adjust the volume of media, calls, ring, and alarm.

1.3 **Barcode Scan Button:**

- On the left and right sides of the machine, there are two barcode scanning buttons, which are orange.
- When it is on, press and hold any scan button for 3 seconds to activate the scanner.
- Short press the scan button to scan the codes.

(Note: Before scanning, you need to open the dialog box and set to writing mode, the code information will be displayed in the dialog box. Please refer to the illustrations below)

 


- ### 1.4 Touch button (from left to right) Return to the last running application

Go back to the main interface. Long press to launch Google Assistant.

Go back to the upper interface or close the running program.

Install SIM card, TF card:

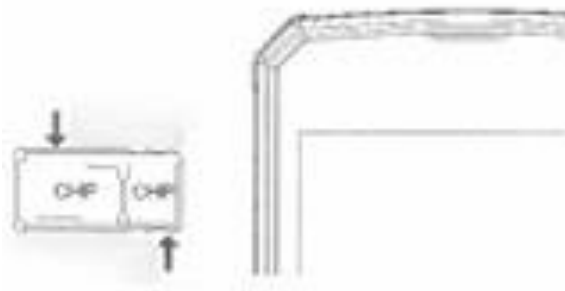

Turn off the device before installing or removing the SIM card or TF card.

Open the SIM card cover, remove the tray, and insert the SIM card as shown. Then slide the tray into the machine. Please pay attention to the SIM card chip facing the display of the device.

The device supports SD expansion. There are alternatives to an SD card or a SIM2 card.













 

Battery:





Install and remove the battery.



- Press the right and left buttons (removing the battery) at the same time to remove the battery when installing the battery in the device, please pay attention to the "front facing the display"

Status icons:

	E: GSM 3G: WCDMA 4G: 4G LTE		Notification
	Call transfer		Play music
	Missed calls		Wi-Fi
	New message/MMS		Connection
	Alarm clock		Airplane mode
	Vibrations		Silent mode
	Bluetooth		Battery status

	Computer connection		Code reader
	Connected headphones		Battery charging

Apps and notifications:

1. Applications

On the home page, click on the tab and swipe up to find all related apps. Back to tab icon at the bottom of the screen to return to the home page.

Settings > Apps & notifications, check recently opened apps and default apps. Configure app permissions, such as location, microphone, camera, and so on.

2. Notifications

The notification will include a new message and a calendar of the event or an ongoing event, such as caller forwarding or call status. You can also open a notification to check your phone's carrier or open a notification for a message, reminder, or event. When a new notification appears. The following operations can be performed by swiping it down to open the notification.

- Tap the notification to open the corresponding app.
- Tap and press down, then swipe up to power off.

3. Unknown sources

Settings > Apps & Notifications > special access to apps > install unknown apps, determining whether or not it's allowed to download an app from the non-electrical market. If your setting is allowed, your phone and personal data will be easily attacked by apps from unknown sources, and you will be responsible for the losses caused by these apps.

Homepage Management:

Expand homepage

A main interface that goes beyond the width of the screen and provides more spaces where you can add new shortcuts, widgets, and more. In addition, users can horizontally swipe on the homepage screen to navigate left or right on the extended homepage interface.

When selecting widgets, add the one you want to display on the home page, it will automatically appear in the empty space of the home page. On the homepage interface, click and pin any app icon to drag it to an empty space on the home page.

Move the home page interface icons:

1. Press and pin the icon until the device vibrates
2. Stay on your finger and drag the icon to where you want it to appear on the home page.

Remove Interface Icons from the Home Page:

1. Press and hold the icon until the device vibrates
2. Don't move your finger, drag the icon to "delete"

Once you remove all the icons and widgets on the home page, this homepage will be removed automatically.

Wireless and networked:

Settings to turn on/off SIM1 or SIM2 in the settings of the Internet -
> SIM card menu

In dual standby mode, select your preferred operator in settings
-> Internet network -> SIM cards -> preferred SIM card

SIM Card Application:

For more information, locate the SIM Toolkit menu on the main system.

Wi-Fi:

Settings Network & internet -> Wi-Fi -> enable -> select a name Wi-Fi and enter the password to connect to Wi-Fi

Bluetooth:

Settings Connected devices -> Connection preferences Turn on Bluetooth select one of the available devices to pair.

Airplane mode: There is no service when this feature is enabled.

Hot spot and tethering:

Allow wireless devices to connect to each other through your wireless router.

Cellular:

Check data usage, open or close 4G/3G service, change network mode, access point name.

Display:

Setting display brightness, wallpaper, auto-rotate screen, sleep mode, font size, and other display functions.