

Manual

Cash box

HD-CB25-5

Table of contents

Specifications: 3
Set contents:..... 4
Open:..... 4
Maintenance: 4
Safety:..... 4

Specifications:

- **Warranty:** 1 year
- **Color:** Black
- **Exterior Material:** Steel
- **Opening system:** key lock
- **Number of compartments:** 1 banknote compartment, 4 coin compartments
- **Additional features:** pull-out money insert, space for other means of payment
- **External dimensions:** 16.5 (W) x 7.8 (L) x 2.3 (H) cm
- **Net Weight:** 1.1kg

Set contents:

- Cash box HD-CB25-5,
- two keys to the lock.

Open:

To open the cassette, turn the key in the lock counterclockwise and lift the top cover.

Maintenance:

At regular intervals (at least once every three months), you should check that the product is safe to use.

Safety:

- Any repairs and alterations to the appliance or its accessories may only be carried out by the manufacturer or persons authorised by the manufacturer.
- Do not disassemble or repair the appliance yourself!
- The product should be handled with care, as it may be damaged by impacts, shocks, or falls, even from a small height.
- Keep the product away from high temperature.
- Do not immerse the device in water or other liquids.