

Manual

Cash box

HD-CB25-5A

Table of contents

Specification:..... 3
Set contents:..... 4
Open:..... 4
Maintenance: 4
Safety:..... 4

Specification:

- **Warranty:** 1 year
- **Color:** Black
- **Material:** Metal, Steel
- **Opening system:** key lock
- **Number of compartments:** 1 banknote compartment, 4 coin compartments
- **Additional features:** pull-out coin insert
- **External dimensions:** 25 cm (W) × 20 cm (L) × 9 cm (H)
- **Package dimensions:** 25.5 x 21 x 10 cm
- **Product weight:** 1.16 kg
- **Weight with packaging:** 1.26 kg

Set contents:

- Cash box HD-CB25-5A,
- two keys to the lock.

Open:

To open the cassette, turn the key in the lock counterclockwise and lift the top cover.

Maintenance:

At regular intervals (at least once every three months), you should check that the product is safe to use.

Safety:

- Any repairs and alterations to the appliance or its accessories may only be carried out by the manufacturer or persons authorised by the manufacturer.
- Do not disassemble or repair the product yourself!
- The product should be handled with care, as it may be damaged by impacts, shocks, or falls, even from a small height.
- Keep the product away from high temperature.
- Do not immerse the device in water or other liquids.