

# Manual

---

Cash box

**HD-CB30-5**

# Table of contents

Specifications: ..... 3  
Set contents:..... 4  
Open:..... 4  
Maintenance: ..... 4  
Safety:..... 4

## Specifications:

- **Warranty:** 1 year
- **Color:** Black
- **Exterior Material:** Steel
- **Opening system:** key lock
- **Number of compartments:** 2 compartments for banknotes, 3 compartments for coins
- **Additional features:** pull-out money insert, space for other means of payment
- **External dimensions:** 30.2 (W) x 23.4 (L) x 8.4 (H) cm
- **Net Weight:** 1.6kg

## Set contents:

- Cash box HD-CB30-5,
- two keys to the lock.

## Open:

To open the cassette, turn the key in the lock counterclockwise and lift the top cover.

## Maintenance:

At regular intervals (at least once every three months), you should check that the product is safe to use.

## Safety:

- Any repairs and alterations to the appliance or its accessories may only be carried out by the manufacturer or persons authorised by the manufacturer.
- Do not disassemble or repair the appliance yourself!
- The product should be handled with care, as it may be damaged by impacts, shocks, or falls, even from a small height.
- Keep the product away from high temperature.
- Do not immerse the device in water or other liquids.