

# Manual

---

## Cash box HD-CB30-9

## Table of contents

Specifications: .....	3
Set contents:.....	4
Open:.....	4
Maintenance: .....	4
Safety:.....	4

## Specifications:

- **Warranty:** 1 year
- **Color:** Black
- **Material:** Metal, Steel
- **Opening system:** key lock
- **Number of compartments:** 4 compartments for banknotes, 5 compartments for coins
- **Dimensions of the banknote compartments:** width 7.3 cm, 7.3 cm, 7.3 cm, 7.3 cm x length 16.7 cm
- **Banknote security features:** stainless steel snaps with spring mechanism
- **External dimensions:** 30 cm (W) × 24 cm (L) × 9 cm (H)
- **Package dimensions:** 31 x 25 x 10 cm
- **Product weight:** 1.72 kg
- **Weight with packaging:** 1.82 kg

## Set contents:

- Cash box HD-CB30-9,
- two keys to the lock.

## Open:

To open the cassette, turn the key in the lock counterclockwise and lift the top cover.

## Maintenance:

At regular intervals (at least once every three months), you should check that the product is safe to use.

## Safety:

- Any repairs and alterations to the appliance or its accessories may only be carried out by the manufacturer or persons authorised by the manufacturer.
- Do not disassemble or repair the product yourself!
- The product should be handled with care, as it may be damaged by impacts, shocks, or falls, even from a small height.
- Keep the product away from high temperature.
- Do not immerse the device in water or other liquids.