

# Manual

---

Money box

**HD-CB30-9A**

# Table of contents

Specification:..... 3  
Kit contents:..... 4  
Open:..... 4  
Maintenance: ..... 4  
Safety:..... 4

## Specification:

- **Warranty:** 1 year
- **Color:** Black
- **Material:** Metal , Steel
- **Opening system:** key lock
- **Number of compartments:** 4 compartments for banknotes, 5 compartments for coins
- **Banknote compartment dimensions:** width 7.3 cm x length 16.7 cm
- **Banknote security:** stainless steel snaps with spring mechanism
- **External dimensions:** 30 cm (W) × 24 cm (L) × 9 cm (H)
- **Package dimensions:** 30.5 x 24.5 x 10 cm
- **Product weight:** 1.68 kg
- **Weight with packaging:** 1.78 kg

## Kit contents:

- Money Box HD-CB30-9A,
- two keys for the lock.

## Open:

To open the cassette, turn the key in the lock counterclockwise and lift the top cover.

## Maintenance:

At regular intervals (at least once every three months), you should check that the product is safe to use.

## Safety:

- Any repairs and changes to the appliance or its accessories may only be carried out by the manufacturer or persons authorised by it.
- Do not disassemble or repair the product yourself!
- The product must be handled with care as it may be damaged by impacts, shocks or falls, even from a small height.
- Keep the product away from high temperature.
- Do not immerse the device in water or other liquids.