

Manual

Medium cash drawer
with key lock

HD-KS30

Table of contents

Specifications:	3
Set contents:.....	4
How to open the drawer:	5
Removing the drawer:	5
Maintenance:	5

Specifications:

- **Warranty:** 1 year
- **Colour :** black, powder coated with hybrid varnish
- **Exterior Material:** Thick Cold Rolled Steel, SECC
- **Sliding system:** polyurethane rollers embedded in rails
- **Number of compartments:** 3 compartments for banknotes with snaps, 4 compartments for coins
- **Lock:** two-position (drawer opening/closing)
- **Additional features:** removable coin compartment
- **Interface:** RJ11
- **Drawer life:** up to 1,000,000 cycles
- **External dimensions:** 30 (W) x 36 (L) x 8 (H) cm
- **Net Weight:** 4kg
- **Weight with packaging:** 4.7 kg

Set contents:

- Cash drawer with RJ11 cable
- Two keys to the lock
- Manual

How to open the drawer:

The drawer can be opened in three ways:

1. With the key included in the set
2. Emergency using the lever located under the device
3. Electronically from the cash register after prior connection to the drawer using an RJ12 cable.

Warning: to reduce the risk of damage or breaking of the key, avoid leaving it in the lock during normal operation.

Removing the drawer:

Open the drawer and remove the plastic tray for coins and bills. Pull the drawer out as far as it will go, tilt the front edge of the drawer upwards, and pull the drawer out at an angle.

Maintenance:

Cash drawer slides should be cleaned and lubricated periodically. The frequency depends on usage and the environment, but the typical recommended frequency is every three months. Use a dry, lint-free cloth to wipe off any old grease and debris from the inner and outer guides. Do not use water or any liquid cleaners. Using a clean applicator, apply a thin layer of lithium-based bearing grease to the inner and outer guides. Turn the guides several times to properly coat the polyurethane rollers and distribute the lubricant evenly.