# Manual

# Automatic RS232 Barcode Scanner HD10C-RS232



# Table of contents

Specifications:	3
Set contents:	
Key features:	
Factory reset	
Barcode scanning modes	
Beep settings	
Setting End Characters	6
Case settings	7
Reading inverted codes (on black background)	
Setting Prefix and Suffix	8
Hiding barcode characters	9
Character table	10



### Specifications:

• Warranty: 2 years

• Light Source: 620nm LED

• Sensor Type: CCD

• Scanning method: manual (on the button) / automatically (after bringing the code closer)

• Scan Acknowledgement: Light and Sound Signal

• Read Rate: 200 times/second

• Interface: RS232

• Cord length: 140 cm

• Ingress protection: IP54

• Device dimensions: 16 x 9.5 x 6.5 cm

• Stand dimensions: 24 x 12 x 12 cm

• Package dimensions: 18.5 x 12 x 8.5 cm

• Device weight: 300 g

• Weight with packaging: 370 g

• Operating temperature: -20 - 50°C

• Storage temperature: -40 - 60°C

 Readable 1D codes: EAN-8, EAN-13, UPC-A, UPC-E, CODE 128, CODE 39, CODE 93, CODE 11, CHINESE 2 of 5, CODABAR, MSI, Interleaved 2 of 5 (ITF), other one-dimensional



### Set contents:

- CCD Barcode Reader
- Dedicated stand for self-assembly
- Built-in RS232 communication cable
- Manual

# Key features:

- Barcode scanning at 200 scans per second
- Ability to scan codes from paper labels and phone screens
- Automatic code reading



# Factory reset



Factory reset

# Barcode scanning modes



Manual mode



Auto mode

To scan barcodes in manual mode, use the scan button to scan the "Factory Default" code.



# Beep settings







Beep off

# Setting End Characters



CR



**TAB** 



Trails Enabled



LF+CR

# Case settings



Change to uppercase/lowercase letters



No case change



Uppercase letters only



Lowercase only

Reading inverted codes (on black background)




**Enabled** 



Disabled (default)

# Setting Prefix and Suffix

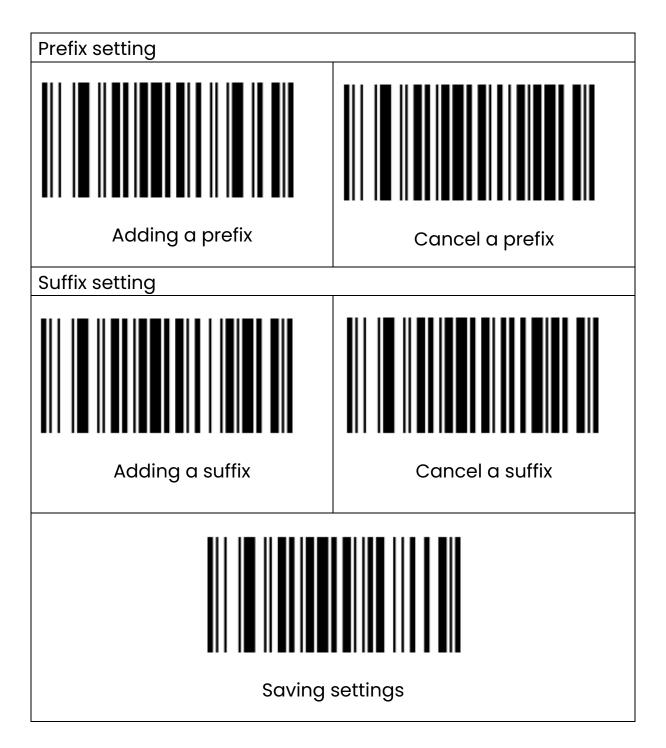


In order to set a prefix or suffix, first scan the code "Add prefix" or "Add suffix", then scan the corresponding character from the



table at the end of this manual and finally read the code "Save settings".

# Hiding barcode characters

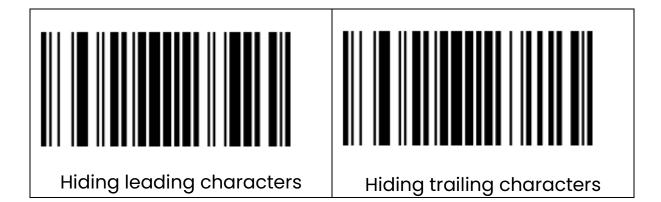

In order to hide individual characters in the barcode, first scan the code "Hide initial characters" or "Hide end characters" and then use the scanner to read the code at the end of this manual, corresponding to the number of digits to be hidden.

**For example,** if you want to hide the first two characters of a barcode, first scan the "Hide initial characters" code, then scan the "0" and "2" codes from the table.



# Character table

The table below contains codes that allow you to set the prefix, suffix and hide characters from the barcode

SOH	STX	ETX
EOT	ENQ	ACK 
BEL	Backspace	TAB
LF	VT	FF
CR	SO	YES
According to	DC1	DC2
DC3	DC4	ТО



SON	ETB	CAN
IN	SUB	ESC
FS	GS	RS
US	SPACE	!
"	#	\$
%	&	1

(	)	*
+	,	-



·	2	3
4	<b>                                     </b>	6
	8	9
<b>                         </b> :		
=		;
@		<b>                                     </b>
C	<b>                    </b> D	And



F	G	Н
I	J	K
L	М	N

Or		<b>                  </b>
	<b>                            </b> S	
In the		

	And	
		]
		C
	and	
g	h	
j 	k 	



р	q	R
S	t	in the

	in	
	}	~
Delete		<b>                    </b>
F3	<b>                                     </b>	<b>                    </b>

### F6		######################################
### F9		
	INSERT(insert)	HOME
Page Up	Delete	END
Page Down	Right arrow	Left arrow

