

Manual

Wired Barcode Reader **HD67W**

Table of contents

| | |
|---|---|
| Specifications:..... | 2 |
| Kit contents:..... | 3 |
| Main Control Codes..... | 4 |
| End-character settings..... | 4 |
| Beep settings..... | 5 |
| Case settings..... | 5 |
| Hide start and end characters..... | 6 |
| Prefix and suffix setting..... | 7 |
| Appendix A. Setting the prefix and suffix – characters..... | 9 |


Specifications:

- **Warranty:** 2 years
- **Material:** ABS+PC
- **Light Source:** 650–670nm Laser
- **Scan Method:** Manual (Push Button)
- **Scan confirmation:** two types of audio emitted
- **Read Speed:** 100 times/second
- **Readability:** 0.10 mm
- **Reading Distance:** 2.5–600mm
- **Error rate:** 1/800 million
- **Print contrast:** min 30%
- **Interface:** USB
- **Cord length:** 200 cm
- **Protection Grade:** IP54
- **Dimensions of the device:** 6.5 x 16 x 9 cm
- **Package dimensions:** 21 x 11.5 x 8.5 cm
- **Device weight:** 165 g
- **Weight with packaging:** 265 g
- **Operating temperature:** 0 to 45°C
- **Storage temperature:** -40 to 60°C
- **Operating Humidity:** 5 to 95%
- **Storage Humidity:** 5 to 95%
- **ID Reads:** EAN-8, EAN-13, EAN-128, UPC-A, UPC-E, CODE 128, CODE 39, CODE 93, CODE 11, Industrial 2 of 5, Interleaved 2 of 5 (ITF), Matrix 2 of 5, CODABAR, MSI





Kit contents:

- Wired Code Reader
- USB cable
- Manual





Main Control Codes

| | |
|--|---|
|  <p>Factory Reset</p> |  <p>View versions</p> |
|--|---|




End-character settings

| |
|---|
|  <p>Adding CR</p> |
|  <p>All codes from the new line</p> |
|  <p>Cancel trailing characters</p> |
|  <p>Adding ATB</p> |

Beep settings

| | |
|--|---|
|  <p>Beep on</p> |  <p>Beep off</p> |
|  <p>Gradually increase the volume after a few scans</p> |  <p>Gradually decrease the volume after a few scans</p> |


Case settings

| |
|---|
|  <p>No case replacement</p> |
|  <p>Conversion to lowercase letters</p> |
|  <p>Conversion to uppercase letters</p> |



Conversion to uppercase and lowercase letters


Hide start and end characters

| | |
|--|---|
|  <p>Hide the last character</p> |  <p>Hide the last two characters</p> |
|  <p>Hide the last three characters</p> |  <p>Hide the last four characters</p> |
|  <p>Hide the last five characters</p> |  <p>Cancel hiding the last characters</p> |
|  <p>Hide the first character</p> |  <p>Hide the first two characters</p> |

| | |
|--|--|
|  <p>Hide the first three characters</p> |  <p>Hide the first four characters</p> |
|  <p>Hide the first five characters</p> |  <p>Cancel hiding leading characters</p> |

Prefix and suffix setting

To set a prefix or suffix, you need to scan the barcode "**Allow to add prefix**" or "**Allow to add a suffix**".

| | |
|---|--|
|  <p>Allow prefix to be added</p> |  <p>Allow suffix to be added</p> |
|---|--|

Next, select the value you want to be the prefix or suffix from Appendix A.

Finally, scan the code "**Exit Prefix and Suffix Add Mode**".



Exit prefix and suffix add mode

To remove both a prefix and a suffix, simply scan the code **"Delete All Prefixes"** or **"Delete All Suffixes"**.



Remove all prefixes



Remove all suffixes

Appendix A. Setting the prefix and suffix – characters



SOH



ETX



ENQ



BEL



TAB



VT



CR



SI



DC1



DC3



STX



EOT



ACK



Backspace



LF



FF



SO



DLE



DC2



DC4



NAK



ETB



EM



ESC



GS



US



!



#



%



SYN



CAN



SUB



FS



RS



SPACE



"



\$



&



“



”



+



-



/



1



3



5



7



(



*



,



.



0



2



4



6



8



9



;



=



?



A



C



E



G



I



K



:



<



>



@



B



D



F



H



J



L



M



O



Q



S



U



W



Y



[



]



N



P



R



T



V



X



Z



\



^



-



,



a



b



c



d



e



f



g



h



i



j



k



l



m



n



o



q



s



u



w



y



{



}



Delete



p



r



t



v



x



z



|



~



F1

--



F2



F4



F6



F8



F10



F12



HOME



Delete



Page down



F3



F5



F7



F9



F11



INSERT



Page up



END



Right arrow



Left arrow



Down arrow



Up arrow