

# Manual

---

## **Cash organizer**

### **InsertTill-405**

## Table of contents

|                              |          |
|------------------------------|----------|
| <b>Specifications:</b> ..... | <b>3</b> |
| <b>Maintenance:</b> .....    | <b>4</b> |
| <b>Safety:</b> .....         | <b>4</b> |

## Specifications:

- **Warranty: 1 year**
- **Color: Black**
- **Material: ABS, Steel**
- **Number of compartments: 5 compartments for banknotes, 4 compartments for coins**
- **Banknote compartment dimensions: W 7.8 cm, 7.7 cm, 7.7 cm, 7.7 cm, 7.7 cm x L 16.2 cm**
- **Banknote security features: stainless steel snaps with spring mechanism**
- **External dimensions: 40.5 cm (W) × 24.2 cm (L) × 3.7 cm (H)**
- **Product weight: 0.66 kg**

## **Maintenance:**

- **Surface cleaning – Clean the cartridge regularly with a soft, dry cloth or damp cloth to remove dust and dirt. Do not use harsh detergents or solvents.**
- **Protect metal components – Latches for banknotes and other metal parts can be gently wiped with a cloth soaked in silicone oil to prevent corrosion and ensure smooth operation.**
- **Mechanism inspection – check the spring mechanism of the latches every few months. If you notice a voltage drop or difficulty in operation, gently lubricate the moving parts with a special technical grease.**

## **Safety:**

- **When inserting and removing cash, avoid excessive force so as not to damage the banknote latch mechanism.**
- **The cartridge should be stored in a dry place to prevent corrosion of metal components and damage to the plastic.**