

User Manual

Safe with electronic lock

SecureBox-35

Table of contents

Specifications:	3
Kit contents:.....	4
Opening:	4
Battery Installation:.....	4
Code Programming:	5
Safe Use:	5
Battery Replacement Warning:.....	6
Battery Replacement:.....	6
Emergency safe opening (manual):	6
Safe Assembly:.....	6

Specifications:


- **Warranty:** 1 year
- **Color:** Beige
- **Material:** Powder-coated steel
- **Material thickness:** 1.5mm
- **Capacity:** 8.5 l
- **Power supply:** 4 × AA 1.5V
- **Opening system:** mechanical key lock and electronic code lock
- **Number of bolts in the lock:** 2 bolts
- **Number of shelves:** 1 shelf
- **External dimensions:** 35 cm (W) × 25 cm (L) × 25 cm (H)
- **Package dimensions:** 40 x 30 x 30 cm
- **Product weight:** 6.5 kg
- **Weight with packaging:** 7 kg

Kit contents:

- Safe: SecureBox-35,
- two keys,
- two mounting screws,
- 4 batteries
- user manual.


Opening:

To open the safe for the first time, remove the plastic cover ("B", see photo) from the front panel, insert the key into the lock and turn it counterclockwise (counterclockwise). At the same time, turn the knob ("A", see photo) to the right (clockwise) to open the safe.

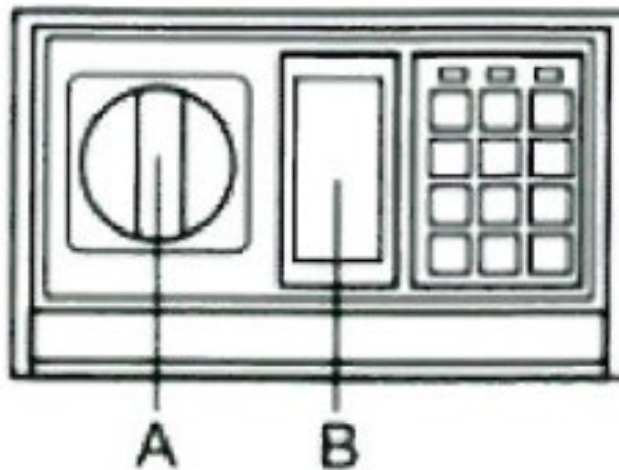

Battery Installation:

The safe requires 4 "AA" batteries (1.5V). Open the safe, remove the battery cover "D" (see photo) from the back of the door, and insert the batteries, paying attention to the correct polarity. It is recommended to use alkaline batteries.

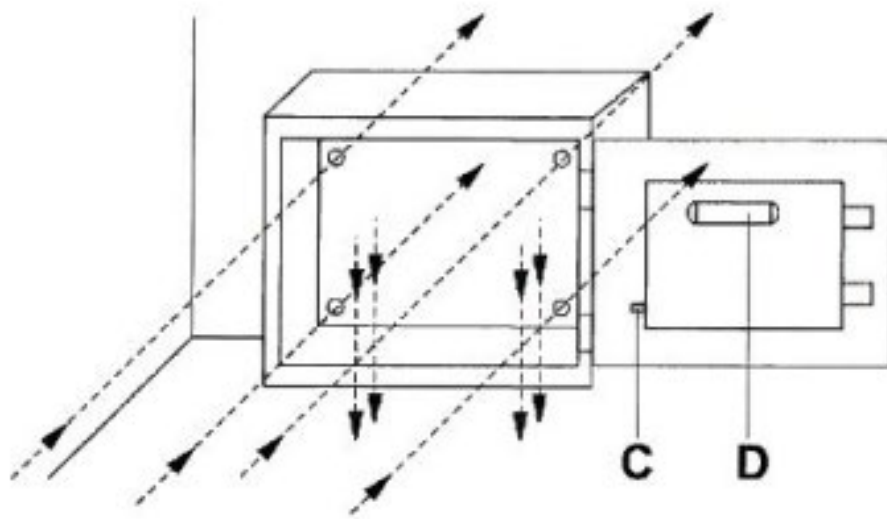

Code Programming:

1. With the safe door open, press the red "C" button (see photo) on the back of the door, close to the hinge. Release the button and you'll hear two beeps and the yellow LED will light up.
2. Within 15 seconds, enter a new code of 3 to 8 digits, then confirm by pressing the letter "B". The safe will beep twice and the yellow LED will turn off – your code has been programmed.
3. Save the new code and verify that it has been saved correctly by opening and closing the safe door.

Safe Use:

To open the safe, enter your code and then press the letter "B". When you hear a beep and the green LED lights up, turn the knob clockwise (clockwise) to open the door within 5 seconds.

If you enter the wrong code three times in a row, the safe will lock - wait 20 seconds before trying again.

Battery Replacement Warning:

If the batteries run out, the red LED (in the center of the numeric panel) will immediately inform you. To test the battery health, simply enter your code and try to open the safe. If the batteries are low, the red LED will light up. If nothing happens, it means that the batteries are fine.

Battery Replacement:

The safe requires 4 "AA" batteries (1.5V). Open the safe, remove the battery cover "D" (see photo) from the back of the door and replace the 4 used batteries with new ones. After replacing the batteries, you must reprogram the code according to step 3. It is recommended to use alkaline batteries.

Emergency safe opening (manual):

For your convenience, the safe is equipped with a manual opening system. If you forget or lose your code, remove the plastic cover from the front panel ("B", see photo), insert the key into the lock, and turn it counterclockwise (counterclockwise). Then turn the knob ("A", see picture) clockwise (clockwise) to manually open the safe at any time.

Safe Assembly:

To minimize the risk of theft of the safe, it can be attached to the floor, wall or cabinet. For your convenience, the safe has mounting holes (diameter 8 mm) on the back and bottom, which allows it to be permanently attached with wall plugs.

⚠ NOTE: The safe should be placed in an upright position during assembly.

