

# Manual

---

## Cash drawer **SecureTill-335F**

# Table of contents

- Specifications: ..... 3
- Kit contents:..... 4
- Key features: ..... 4
- Installation:..... 5
- Opening the drawer:..... 5
- Maintenance: ..... 5
- Safety:..... 5

## Specifications:

- **Warranty:** 1 year
- **Color:** Black
- **Material: Metal**
- **Surface:** high quality SGCC powder coated galvanized sheet
- **Sliding system:** guide-based design
- **Number of compartments:** 4 compartments for banknotes, 5 compartments for coins
- **Banknote compartment width:** width 7.8 cm, 7.3 cm, 6.9 cm, 6.3 cm x length 18.5 cm
- **Lock:** three-position with four functions (drawer open/close, manual opening, electronic opening)
- **Additional functions:** pull-out coin compartment, partially adjustable coin compartments, slot for other means of payment
- **Interface:** RJ12
- **Coil Voltage:** 12V
- **Drawer life:** up to 1,000,000 duty cycles
- **External dimensions:** 33.5 cm (W) × 36.7 cm (L) × 9.3 cm (H)
- **Package dimensions:** 39 x 44.5 x 14 cm
- **Product weight:** 3.5 kg
- **Weight with packaging:** 4.04 kg

## Kit contents:

- Cash drawer,
- two keys for the lock,
- cable with RJ12 plug.

## Key features:

- **Number of compartments:** 4 compartments for banknotes, 5 compartments for coins
- **Material:** Metal
- **External dimensions:** 33.5 cm (W) × 36.7 cm (L) × 9.3 cm (H)
- **Additional functions:** pull-out coin compartment, partially adjustable coin compartments, slot for other means of payment

## Installation:

The cash drawer is equipped with a standard 6-pin RJ12 plug for direct connection to any EPSON POS printer or Epson-compliant POS equipment. When the receipt is finished printing, the printer automatically opens the drawer.

## Opening the drawer:

### **The drawer can be opened in three ways:**

1. With the key included
2. Emergency using the lever located under the device
3. Electronically from the cash register after prior connection to the drawer using an RJ12 cable.

**Warning:** To reduce the risk of damage or breakage of the key, avoid leaving it in the lock during normal operation.

## Maintenance:

Drawer slides should be cleaned and lubricated periodically. The frequency depends on usage and environment, but the typical recommended frequency is every three months. Using a dry, lint-free cloth, wipe off old grease and debris from the inner and outer guides. Do not use water or any liquid cleaners. Using a clean applicator, apply a thin layer of lithium-based bearing grease to the inner and outer guides. Rotate the guides several times to properly coat the polyurethane rollers and distribute the lubricant evenly.

## Safety:

- The cash drawer is designed exclusively for storing money and documents related to trading activities. Do not store

objects that may damage the mechanism or affect its design.

- The product is not waterproof. Avoid contact with water, other liquids and excessive moisture to prevent damage.
- Place the drawer in a stable, dry place that will provide protection against mechanical damage and unauthorized access.
- If you have trouble opening the drawer, do not use force. Contact an authorized technical service.
- Be careful when opening the drawer to avoid pinching your fingers.