

Manual

Money drawer **SecureTill-405F**

Table of contents

Specifications:	3
Set contents:	4
Key features:	4
Installation:	4
Opening the drawer:	5
Maintenance:	5
Safety:	5

Specifications:

- **Warranty:** 1 year
- **Color:** Black
- **Material:** Metal
- **Surface:** high quality SGCC galvanized sheet powder coated
- **Sliding system:** guide-based design
- **Number of compartments:** 5 banknote compartments, 8 coin compartments
- **Width of banknote compartments:** width 7.8 cm, 7.4 cm, 7.2 cm, 7 cm, 7 cm x length 16 cm
- **Lock:** three-position with four functions (drawer opening/closing, manual opening, electronic opening)
- **Additional features:** pull-out coin compartment, adjustable coin compartments, slot for other means of payment
- **Interface:** RJ12
- **Coil Voltage:** 12V
- **Drawer life:** up to 1,000,000 cycles
- **External dimensions:** 40.5 cm (W) × 42 cm (L) × 11 cm (H)
- **Package dimensions:** 46.5 x 48 x 16 cm
- **Product weight:** 4.6 kg
- **Weight with packaging:** 5.2 kg

Set contents:

- Cash drawer,
- two keys to the lock,
- cable with RJ12 plug.

Key features:

- **Number of compartments:** 5 banknote compartments, 8 coin compartments
- **Material:** metal
- **External dimensions:** 40.5 cm (W) × 42 cm (L) × 10 cm (H)
- **Additional features:** pull-out coin compartment, adjustable coin compartments, slot for other means of payment

Installation:

The cash drawer is equipped with a standard 6-pin RJ12 plug for direct connection to any EPSON POS printer or Epson-compliant

POS equipment. When the receipt is finished printing, the printer automatically opens the drawer.

Opening the drawer:

The drawer can be opened in three ways:

1. With the key included in the set
2. Emergency using the lever located under the device
3. Electronically from the cash register after prior connection to the drawer using an RJ12 cable.

Warning: To reduce the risk of damage or breakage of the key, avoid leaving it in the lock during normal operation.

Maintenance:

Drawer slides should be cleaned and lubricated periodically. The frequency depends on usage and the environment, but the typical recommended frequency is every three months. Use a dry, lint-free cloth to wipe off any old grease and debris from the inner and outer guides. Do not use water or any liquid cleaners. Using a clean applicator, apply a thin layer of lithium-based bearing grease to the inner and outer guides. Turn the guides several times to properly coat the polyurethane rollers and distribute the lubricant evenly.

Safety:

- The cash drawer is designed only for storing money and documents related to commercial activities. Do not store items that may damage the mechanism or affect its structure.
- The product is not waterproof. Avoid contact with water, other liquids, and excessive moisture to prevent damage.

- Place the drawer in a stable, dry place that will provide protection against mechanical damage and unauthorized access.
- If you have trouble opening the drawer, do not force it. Contact an authorized technical service.
- When opening the drawer, be careful to avoid trapping your fingers.