

# User Manual

---

## Electric Desk Frame **deskTOP-26W**

# Table of contents

- Specifications: ..... 3
- Set contents:..... 4
- Features: ..... 4
- Control Panel:..... 5
- Remark:..... 5
- Timer:..... 6
- Memory Setting: .....7
- Lock Screen Function:.....7
- Unit Switching (cm/inch): .....7
- Power Saving Mode ..... 8

## Specifications:

- **Warranty:** 1 year
- **Type:** Straight Desk Frame
- **Colour:** matt white
- **Material:** Steel , Aluminum, Plastic
- **Height adjustment:** electric
- **Number of electric motors:** 2
- **Tabletop size:** 120~170 x 60~90 cm
- **Height adjustment range:** from 69 to 117 cm
- **Width adjustment range:** from 100 to 150 cm
- **Maximum Memory: Up** to 2 height settings
- **Width:** 120~170 cm
- **Height:** 69~117 cm
- **Depth:** 60 cm
- **Maximum load:** 125 kg
- **Speed:** 25 mm/s
- **Power supply:** 100-240V, 50/60 Hz
- **Cord length:** 180 cm
- **Ingress protection:** IP20
- **Working temperature:** -5 °C ~40 °C
- **Weight:** 30 kg
- **Package dimensions:** 85 x 30 x 20 cm

## Set contents:

- Desk frame with supports and electric motor,
- control panel with adapter and power supply,
- mounting pins and screws,
- Assembly instructions.

## Features:

- **Type:** Straight Desk Frame
- **Colour:** White, matte
- **Height adjustment:** electric
- **Height adjustment range:** from 69 to 117 cm
- **Maximum Memory: Up** to 2 height settings

## Control Panel:

Display – indicates the current height of the desk


^ – Move Up

v – Move Down

1/2 – Altitude Memory

M – Memory/Screen Lock (Unlock)

T – Timer

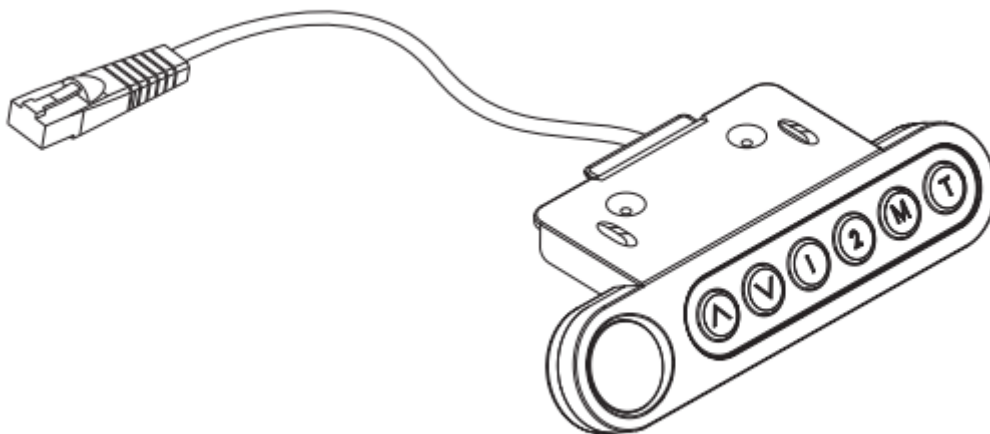

## Remark:

If you are using the control panel for the first time, you must reset the system before normal operation.

Reset the system:

To reset the system, press and hold the "up" and "down" buttons at the same time. The unit will beep once and "rSI" will appear on the display, after which the dashboard will start moving downwards and move to the lowest position. Do not release the buttons until the unit has beeped once again.

The desktop will move up slightly and the display will show the current height of the desktop. Press and release the button to raise the desk/lower precisely.

**Height adjustment:** Press and hold the "UP/DOWN" button to raise or lower the desk to the desired height.

Timer:

- Press the "T" button to set the time to inform users to stand up. Each press of the "T" button results in an increment of 0.5 hours. The maximum time setting is 2 hours. Once the time is set, the display will flash for a few seconds and automatically return to the desk height display. Then the indicator light in the upper right corner of the panel will turn off.
- The unit will beep 5 times to remind the user that the set time has elapsed.
- To cancel the timer, press the "T" button repeatedly until the display shows the current altitude and the indicator turns off.

## Memory Setting:

- To store the position in the memory, press the "M" button and "S-" will flash on the display. When "S-" is displayed, press button 1 or 2.
- To call up a stored position, press the memory button 1 or 2 and the system will begin to move to the desired memory position. The display will count down the altitude as you approach the memory position. Press any button to stop the movement.

## Lock Screen Function:

For safety reasons, the control panel has a lock function. To activate/cancel the lock function, please follow the instructions:

- To lock the controls, press "M" for 3 seconds. If the controller is locked, only the "---" bar lights up on the display, and every operation is important.
- To unlock the controller, press "M" for 3 seconds. The height will appear on the display.

## Unit Switching (cm/inch):

Hold down the "T" button for about 3 seconds and the reading will change from the current setting.

## Power Saving Mode

The system will enter power saving mode and the display will go dark if no actions are performed for more than 10 minutes. Tap any button to activate the control panel.