

# User Manual

---

Cash drawer

**HD-KFT46**

# Table of contents

- Specifications: ..... 3
- Kit contents..... 4
- Features: ..... 4
- Installation..... 4
- How to open a drawer ..... 4
- Removing the drawer ..... 5
- Maintenance ..... 5

## Specifications:

- **Warranty:** 1 year
- **Colour :** black, powder coated with hybrid varnish
- **Exterior Material:** Thick Cold Rolled Steel, SECC
- **Opening system:** three springs mounted on a shaft with four hinges
- **Number of compartments:** 6 compartments for banknotes with snaps, 8 compartments for coins
- **Lock:** two-position (with drawer opening/closing functions, manual opening, electronic opening)
- **Additional functions:** removable money insert, slot for other means of payment
- **Connector Interface:** RJ12
- **Coil Voltage:** 6/12V
- **Reliability:** up to one million cycles
- **External dimensions:** 46 (W) x 17 (L) x 10.4 (H) cm
- **Package dimensions:** 52 x 23 x 16.5 cm
- **Net weight:** 4.5kg
- **Weight with packaging:** 5 kg

## Kit contents

- Cash drawer
- Two lock keys
- RJ12 plug cable
- Manual

## Features:

- **Number of compartments:** 6 compartments for banknotes with snaps, 8 compartments for coins
- **Lock:** two-position (with drawer opening/closing functions, manual opening, electronic opening)
- **Connector Interface:** RJ12
- **Additional functions:** removable money insert, slot for other means of payment

## Installation

The cash drawer is equipped with a standard 6-pin RJ12 plug for direct connection to any EPSON POS printer or Epson-compliant POS equipment. When the receipt is finished printing, the printer automatically opens the drawer.

## How to open a drawer

### **The cash drawer allows you to open it in 2 ways:**

- Manual opening (turning the key will open the drawer).
- Electronic opening (drawer is controlled by printer).
- An open/close lock means that the drawer cannot be opened manually.

**Warning:** to reduce the risk of damage or breaking of the key, avoid leaving it in the lock during normal operation.

## Removing the drawer

Open the drawer and remove the plastic tray for coins and bills. Pull the drawer out as far as it will go, tilt the front edge of the drawer upwards, and pull the drawer out at an angle.

## Maintenance

Cash drawer slides should be cleaned and lubricated periodically. The frequency depends on usage and the environment, but the typical recommended frequency is every three months. Use a dry, lint-free cloth to wipe off any old grease and debris from the inner and outer guides. Do not use water or any liquid cleaners. Using a clean applicator, apply a thin layer of lithium-based bearing grease to the inner and outer guides. Turn the guides several times to properly coat the polyurethane rollers and distribute the lubricant evenly.