

User manual

Cash drawer

HD-KFT46

Table of contents

Specification:.....	3
Kit contents:.....	4
Features:	4
Installation.....	5
How to open the drawer	5
Removing the drawer	5
Maintenance	6

Specification:

- **Warranty:** 1 year
- **Color:** black, powder coated with hybrid paint
- **Exterior material:** thick cold rolled steel, SECC
- **Opening system:** three springs set on a shaft with four hinges
- **Number of compartments:** 6 bill compartments with latches, 8 coin compartments.
- **Lock:** two-position (with functions of opening/closing the drawer, manual opening, electronic opening).
- **Additional features:** removable cash insert, slot for other means of payment
- **Connector interface:** RJ12
- **Coil voltage:** 6/12V
- **Reliability:** up to one million operating cycles
- **External dimensions:** 46 (W) x 17 (L) x 10.4 (H) cm
- **Packaging dimensions:** 52 x 23 x 16.5 cm
- **Net weight:** 4.5 kg
- **Weight with packaging:** 5 kg

Kit contents::

- Cash drawer,
- two keys for the locks,
- cable with RJ12 plug,
- user manual.

Features:

- **Number of compartments:** 6 compartments for banknotes with latches, 8 compartments for coins.
- **Lock:** two-position (with functions of opening/closing drawer, manual opening, electronic opening).
- **Connector interface:** RJ12
- **Additional features:** removable money insert, slot for other means of payment

Installation

The cash drawer is equipped with a standard 6-pin RJ12 plug for direct connection to any EPSON POS printer or Epson-compatible POS equipment. When the printer finishes printing the receipt, it automatically opens the drawer.

How to open the drawer

The cash drawer allows you to open it in 2 ways:

- Manual opening (turning the key will open the drawer).
- Electronic opening (the drawer is controlled by the printer).
- The open/close lock means that the drawer cannot be opened manually.

Warning: to reduce the risk of damaging or breaking the key, avoid leaving it in the lock during normal operation.

Removing the drawer

Open the drawer and remove the plastic tray for coins and banknotes. Pull the drawer out as far as it will go, tilt the front edge of the drawer up and pull the drawer out at an angle.

Maintenance

Cash drawer slides should be cleaned and lubricated periodically. The frequency depends on use and environment, but the typical recommended frequency is every three months. Using a dry, lint-free cloth, wipe old grease and dirt from the inner and outer slide. Do not use water or any liquid cleaners. Using a clean applicator, apply a thin layer of lithium-based bearing grease to the inner and outer guides. Rotate the guides several times to properly coat the polyurethane rollers and distribute the grease evenly.