

User Manual

Large cash drawer

HD-KW43

Table of contents

- Specifications: 3
- Set contents: 4
- Installation: 4
- How to open the drawer: 4
- Removing the drawer: 4
- Maintenance: 5

Specifications:

- **Warranty:** 1 year
- **Colour :** black, powder coated with hybrid varnish
- **Material:** Thick cold-rolled steel and SECC
- **Sliding system:** polyurethane rollers embedded in **rails**
- **Number of compartments:** 7 compartments for banknotes with snaps, 4 compartments for coins
- **Lock:** three-position with four functions (drawer opening/closing, manual opening, electronic opening)
- **Additional features:** removable coin compartment, slot for other means of payment
- **Connector Interface:** RJ12
- **Coil Voltage:** 6/12V
- **Reliability:** up to 1,000,000 duty cycles
- **Exterior dimensions:** 40.5 (W) x 43 (L) x 10 (H) cm
- **Device weight:** 5 kg
- **Weight with packaging:** 6 kg

Set contents:

- Cash drawer with money compartments
- Two keys to the lock
- RJ12 plug cable
- Manual

Installation:

Capacity and sufficient space for cash are offered by a practical organizer with as many as seven banknote compartments with spring-loaded latches and four coin compartments. Noteworthy is a special, wide slot on the front of the device, which allows you to freely place other means of payment inside the drawer without having to open it.

How to open the drawer:

The drawer can be opened in three ways:

1. With the key included in the set
2. Emergency using the lever located under the device
3. Electronically from the cash register after prior connection to the drawer using an RJ12 cable.

Warning: to reduce the risk of damage or breaking of the key, avoid leaving it in the lock during normal operation.

Removing the drawer:

Open the drawer and remove the plastic tray for coins and bills. Pull the drawer out as far as it will go, tilt the front edge of the drawer upwards, and pull the drawer out at an angle.

Maintenance:

Cash drawer slides should be cleaned and lubricated periodically. The frequency depends on usage and the environment, but the typical recommended frequency is every three months. Use a dry, lint-free cloth to wipe off any old grease and debris from the inner and outer guides. Do not use water or any liquid cleaners. Using a clean applicator, apply a thin layer of lithium-based bearing grease to the inner and outer guides. Turn the guides several times to properly coat the polyurethane rollers and distribute the lubricant evenly.