

Manual

125 kHz RFID Encoded Stickers

HD-RCC01

Table of contents

Specifications:	2
How to use	3
Mounting the sticker	3
Storage and durability	3
Disposal	4

Specifications:

- **Color:** White
- **Material:** PVC
- **Finish:** White gloss
- **Operating Frequency:** 125kHz
- **Chip:** TK4100
- **Diameter:** 25 mm

How to use

1. Prepare an RFID reader that supports 125 kHz.
2. Make sure the reader is properly connected to the system (USB/RS232/Wiegand/Ethernet) and that the reading software is running.
3. Read the sticker by holding it close to the reader's antenna. The system should return a 10-digit code.
4. Enter the code in the IT system (WMS, time and attendance system, POS) and assign it to the given item / employee / container.

Mounting the sticker

- Clean and degrease the surface where you will apply the sticker (a dry, smooth surface is best for a permanent adhesion).
- Remove the protective layer from the sticker.
- Apply the sticker by pressing firmly for a few seconds.

Storage and durability

- Store the stickers in a dry place and in the original packaging until use.
- Avoid prolonged exposure to direct sunlight and extreme temperatures.
- If the sticker is mechanically damaged (abrasion, tearing), replace it with a new one

Disposal

Stickers contain electronic components – dispose of them at the end of use in accordance with local e-waste regulations.