

User Manual

Barcode Reader

HD-S90

RS232

Table of contents

Specifications: 3
Set contents:..... 4
Control codes – reader settings:..... 4
Control codes – RS232 interface settings:..... 6
Control codes – RS232 interface settings 8

Specifications:

- **Warranty:** 2 years
- **Scanner Type:** Laser
- **Light Source:** 650–670nm Laser
- **Scanning method:** automatically (when you bring the code closer)
- **Read Rate:** 100 times/second
- **Scan Angle:** 45°
- **Current Consumption:** 100 mA
- **Interface:** RS232
- **Cable length:** 200 cm
- **Device dimensions:** 5.5 x 6.5 x 3 cm
- **Package dimensions:** 17 x 12 x 7 cm
- **Device weight:** 155 g
- **Weight with packaging:** 225 g
- **Operating temperature:** 0 to 50°C
- **Storage temperature:** -40 to 70°C
- **Operating Humidity:** 5 to 90%
- **Storage Humidity:** 5 to 90%
- **ID Readable Codes:** UPC/EAN, UPC/EAN with Addends, UCC/EAN 128, Code 39, Code 39 Full ASCII, Trioptic Code 39, Code 128, Code 128 Full ASCII, Codabar, Interleaved 2 of 5 (ITF), Discrete 2 of 5, Code 93, MSI, Code 11, RSS Variants

Set contents:

- Stationary one-dimensional code reader
- RS232 cable
- Manual

Control codes – reader settings:



Software version



Factory reset



Continuous operation mode



Automatic operation mode



Insert ENTER after code



Insert double ENTER after code



Insert TAB




Remove ENTER



Remove TAB



Insert STX before code

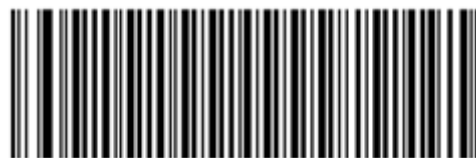

Insert ETX before code



Turn on the sound



Turn off the sound

Control codes – RS232 interface settings:



Baud Rate 600



Baud Rate 1200



Baud Rate 2400



Baud Rate 4800



Baud Rate 9600



Baud Rate 19200



Baud Rate 38400



Without parity checks



Odd Parity Check



Even Parity Check



Data bit 8



7 data bit

Control codes – RS232 interface settings



Stop bit 1



Stop bit 2