

# User Manual

---

Code reader

**HD-SL62**

# Table of contents

- Specifications: .....1
- Set contents:.....2
- Features: ..... 3
- Master codes..... 4
- Setting End Characters..... 5
- Case settings ..... 6
- Reversed Code Reading Settings.....7
- Prefix and Suffix settings ..... 8
- Beep settings..... 9
- Appendix 1. ASCII character table .....10

## Specifications:

- **Warranty:** 2 years
- **Material:** ABS + PC
- **Light Source:** 650nm diode Laser
- **Scan pattern:** single scan
- **Scanning method:** manual (push-button)
- **Scan Speed:** 50 times/second
- **Scanning from depth of field:** 0 - 350mm ( 0.33 mm pcs0.9)
- **Elevation angle:** 65°
- **Deflection angle:** 55°
- **Print Contrast:** 30 UPC / EAN 100
- **Daylight:** 5000 Lux
- **Voltage:** 5V
- **Current Draw:** 85 mA (Peak Current: 120)
- **Interface:** USB
- **Cable length:** 200 cm
- **Ingress protection:** IP54
- **Device dimensions:** 7 x 17 x 9 cm
- **Package dimensions:** 10 x 8 x 24 cm
- **Device weight:** 240 g
- **Weight with packaging:** 340 g
- **Operating temperature:** 0 to 45°C
- **Storage temperature:** -20 to 60°C
- **Operating Humidity:** 5 to 85% RH, non-condensing
- **Readable ID codes:** EAN - 8 EAN-13, UPC- A, UPC- E, Code 39, Code 128, EAN-128

## Set contents:

- Wired barcode reader
- USB cable
- Manual

## Features:

- **Scanner Type:** Laser
- **Scan button life:** up to 50 million clicks
- **Scan speed:** up to 50 times per second
- **Degree of protection :** IP5 class

## Master codes



Restore to settings

Factory



Enable Setup Mode



Disable Setting Mode

# Setting End Characters



No end marks



TAB



ENTER



Space


# Case settings




No case change



Uppercase letters

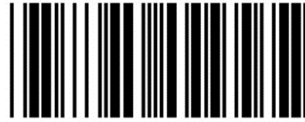

Lowercase

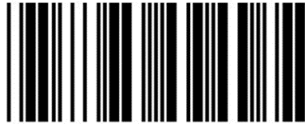

Uppercase and lowercase letters

## Reversed Code Reading Settings



Enabled



Disabled

## Prefix and Suffix settings



Set a prefix



Set a suffix

## Beep settings



Normal tone of the beep



Short beep



Average beep length



Long beep



Low signal volume




Average signal volume



High beep volume



Startup sound enabled

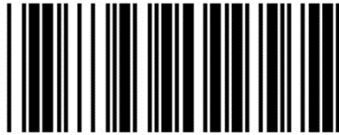

Startup sound disabled




Appendix 1. ASCII character table




SOH



HT

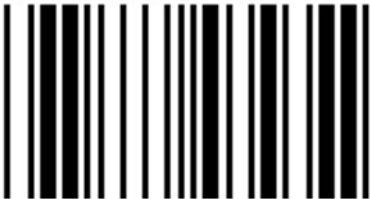

STX

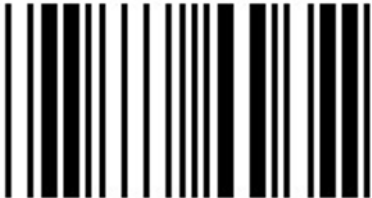

LF




ETX



VT



EOT

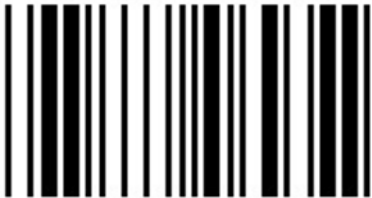

FF



ENQ



CR



ACK



SO



BEL



SI



BS




DLE




DC1



DC2

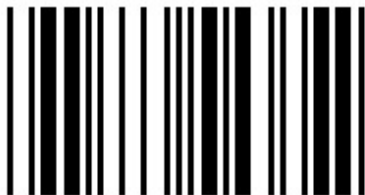


DC3

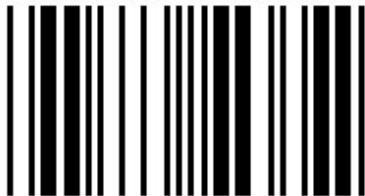

DC4



NAK

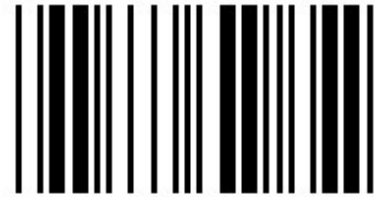

SUB



ESC



FS



GS



RS



SYN



US



ETB



SPACE



CAN



!



EM



"



#



+



\$



,



%



-



(



0



)



1



\*



2



3



;



4



5



6



7



<



=



>





8



@



9



A



:



B



C



K





D



E



F



G



L



M



N



About



H



I



J



S



P



Q



R



[



T



U



V



W



X



Y



Z



[



X



Y



Z



\



a



b



c



k



d



e



f



g



l



m



n



about



h



p



i



q



j



r



s



{



t



u



v



w



l



}



~



F1(@A)



X




F2(@B)



y



F3(@C)

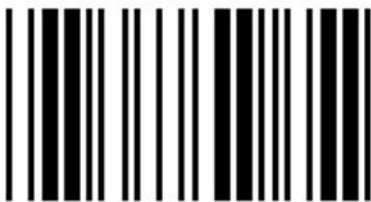

z



F4(@D)



F5(@E)



HOME(A)





F6(@F)



F7(@G)




F8(@H)



F9(@I)



END(&B)

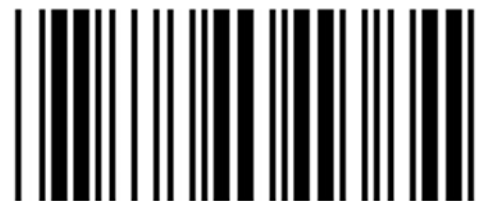

Prawa strzałka(&C)



Lewa strzałka(&D)



Top Arrow(&E)




F10(@J)




F11(@K)



F12(@L)

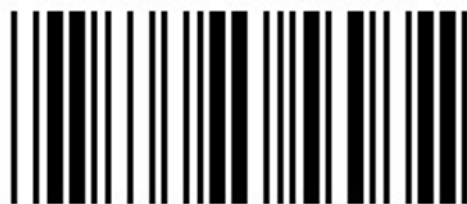

TAB(&I)

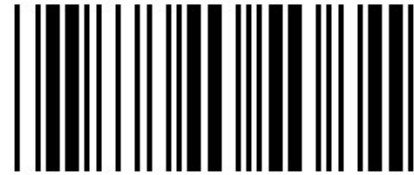


Dolna strzałka (&F)



PgUp(&G)



PgDn(&H)

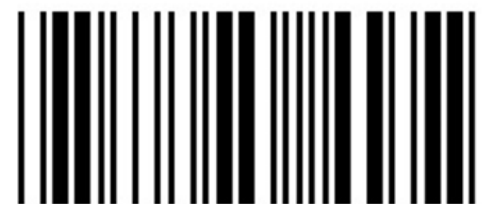

CTRL OFF(&Q)



Back TAB(&J)



ESC(&K)



ENTER(&L)



Insert(&M)



ALT ON(&R)



ALT OFF(&S)



SHIFT ON(&T)



SHIFT OFF(&U)



Delet(&N)



WIN (&V)




Return(&O)



HOME (&W)



CTRL ON(&P)

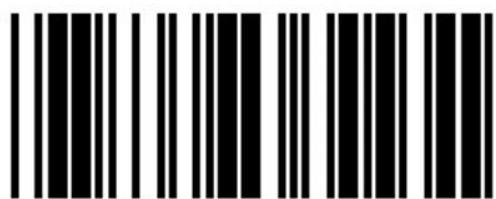

END (&X)