

# User Manual

---

Cash tray for cash  
drawer

**HD-WS33**

Table of contents

Specifications: ..... 3  
Features: ..... 4  
Preparation for use ..... 4  
Cleaning ..... 4

## Specifications:

- **Warranty:** 1 year
- **Color:** Black
- **Material:** ABS plastic, SECC metal plate
- **Number of banknote compartments:** 4
- **Dimensions of the banknote compartments:** 4 compartments, 7 cm wide and 18.8 cm long, adjustable,
- **Number of coin compartments:** 5
- **Banknote security:** stainless steel snaps with spring mechanism
- **Additional functions:** adjustable compartments for coins and banknotes, compartment under the coin insert for other means of payment
- **Insert dimensions:** 30 (W) x 25 (L) x 5.9 (H) cm
- **Package dimensions:** 36 x 33.5 x 6.8 cm
- **Cartridge weight:** 1 kg
- **Compatible drawer models:** HD-KR33

## Features:

- **Number of compartments:** 4 compartments for banknotes, 5 compartments for coins
- **Insert dimensions:** 30 (W) x 25 (L) x 5.9 (H) cm
- **Bill security:** Stainless steel snaps with spring mechanism
- **Additional functions:** Adjustable compartments for coins and banknotes, compartment under the coin insert for other means of payment

## Preparation for use

- **Checking the Contents:** Make sure the kit includes the cash register, lock keys and user manual.
- **Placement:** Place the checkout cartridge on a flat, stable surface in a secure location away from unauthorised access.

## Cleaning

Clean the cash register cartridge regularly using a dry, soft cloth. Avoid using water or chemicals.