

Manual

Cash drawer insert

HD-WS46

Table of contents

Specification:..... 3
Maintenance 4
Safety..... 4

Specification:

- **Warranty:** 1 year
- **Colour :** black, powder coated with hybrid varnish
- **Material:** ABS plastic, thick cold-rolled steel
- **Number of compartments for banknotes:** 6
- **Dimensions of the banknote compartments:** 6 compartments 3.5 cm wide and 16 cm long
- **Number of coin compartments:** 8
- **Money security:** dedicated lock housed in a thick steel metal lid
- **Additional functions:** adjustable banknote compartments, compartment under coin containers for other means of payment, plastic handles in the lid
- **Insert dimensions:** 45 (W) x 15.5 (L) x 8.8 (H) cm
- **Package dimensions:** 36 x 33.5 x 6.8 cm
- **Cartridge weight:** 2.5 kg
- **Compatible drawer models:** HD-KFT46

Maintenance

- Use a soft, damp cloth to clean. Avoid using harsh detergents or solvents that can damage the surface of the cartridge.
- Make sure the cartridge is stored in a dry place. Excessive moisture can lead to corrosion of metal components or deformation of plastic parts.
- Regularly check that the bill holders are running smoothly. In case of jamming, gently lubricate the mechanism with a suitable grease designed for small parts.
- Overfilling the insert can lead to damage to the dividers. Take care of the even distribution of money.

Safety

- The insert is intended for storing banknotes and coins only. It should not be used for other purposes, such as storing sharp objects or chemicals.
- Always store the cartridge in a closed cash drawer to minimize the risk of theft.
- Avoid sudden movements when moving a cartridge filled with money to prevent it from spilling out.
- The product is not a toy. Prevent access by children to avoid the risk of accidental damage or swallowing of small parts.