

Manual

Barcode scanner with
WIFI and docking station

HD19I

Table of contents

Specifications:.....	2
Set contents:.....	3
Master Control Codes.....	4
Barcode Transfer Modes.....	4
Barcode ID settings	5
ID parameters	5
Sleep time settings.....	6
Scanning a Repeating Barcode.....	7
Numeric and alphanumeric codes.....	7
Setting the function keys	9
Add a prefix and suffix.....	10




Specifications:

- **Warranty:** 2 years
- **Material:** ABS + PC
- **Light Source:** 650nm Laser
- **Scanning method:** manual (push-button)
- **Scan confirmation:** LED (red, blue), two types of sound
- **Scanning Speed:** 100 times/second
- **Reading width:** 100 mm
- **Readability Accuracy:** 0.10-0.825mm
- **Error rate:** 1/50 million
- **Wireless frequency:** 433 MHz
- **Battery Capacity:** 1200mAh
- **Interface:** USB
- **Cable length:** 100 cm
- **Ingress Protection:** IP52
- **Device dimensions:** 7 x 16 x 9 cm
- **Dimensions of the docking station:** 25 x 8.4 x 6.6 cm
- **Package dimensions:** 25 x 14 x 8 cm
- **Device weight:** 420 g
- **Weight with packaging:** 500 g
- **Operating temperature:** 0 to 50°C
- **Storage temperature:** -40 to 60°C
- **Operating Humidity:** 5 to 85%
- **ID code reads:** EAN-8, EAN-13, UPC-A, UPC-E, CODE 128, CODE 39, CODE 93, CODE 11, GS1-DATAE, INDUS 2 of 5, IATA 2 of 5, MATRIX 2 of 5, CHINESE 2 of 5, CODABAR, MSI, Interleaved 2 of 5 (ITF), other one-dimensional

Set contents:

- Wireless barcode reader
- Docking station
- USB cable
- User manual

Master Control Codes

 Entering Setup Mode	 Factory reset
 Exiting Setup Mode	

Before setting any function, you must first scan the "Enter Configuration Mode" code, and after setting it, read the "Exit Configuration Mode" code to save the settings.

Barcode Transfer Modes

 Real-world mode	 No Data Loss Mode
 Check the active mode	 Amount of stored data in memory





Barcode ID settings









ID parameters



4	5
---	---




 6	 7
 8	 9

Sleep time settings

 Entering the sleep settings	 Sleep after 20 seconds
 Sleep after 30 seconds	 Sleep after 60 seconds
 Sleep after 2 minutes	 Sleep after 5 minutes

 <p>Sleep after 10 minutes</p>	 <p>Sleep after 20 minutes</p>
 <p>Sleep after 8 hours</p>	 <p>Sleep off</p>

Scanning a Repeating Barcode

 <p>Disabled</p>	 <p>Enabled</p>
 <p>Setting the amount of time for which the repeater the code will not be scanned</p>	

Numeric and alphanumeric codes

 <p>0</p>	 <p>1</p>
--	---

 2	 3
 4	 5
 6	 7
 8	 9
 A	 B
 C	 D









Setting the function keys



 F9	 F10
 F11	 F12
 HOME	 TAB

Add a prefix and suffix

 Adding a prefix	 Displaying the prefix
 Prefix display disabled	 Add a suffix
 Display the suffix	 Suffix display disabled