

Statement

Programming the
character ~ as a prefix

HD67

To set ~ as a prefix on the HD67 reader, scan the following codes one by one.

