

User Manual

Document shredder paperCUT-N2205

Table of contents

- Specification..... 3
- The set contains:..... 4
- Features: 4
- Description of the shredder 5
- Warnings 5
- Installation.....7
- Safety Instruction7
- Manual 9
- Troubleshooting.....12

Specification

- **Warranty:** 1 year
- **Safety level (DIN):** P-7
- **Cutting type:** trimmings
- **Size of processed material:** 1 x 1 mm
- **Basket capacity:** 22 litres
- **Shredder:** integrated into the housing
- **Type of media disposed of:** paper, plastic cards, CDs/DVDs
- **Number of sheets shredded at the same time:** 5 sheets
- **Paper slot width:** 230 mm
- **Duty cycle:** 20 minutes run/ 35 minutes break
- - **Container Pulled Out Sensor:** Yes
- - **Overheat indicator:** Yes
- - **Auto Power On:** Yes
- **Wheels:** 4 pieces
- **Product Dimensions:** 36.5 x 26.5 x 55.5 cm
- **Product weight:** 14 kg



The set contains:

- Document shredder paperCUT-N2205
- Integrated power cord
- Manufacturer's Instruction Manual

Features:

- 5 sheets of paper can be recycled at the same time
- Security of destroyed data, without the possibility of recovering it, offered by level P-7
- Possibility to dispose of both paper and plastic cards and CDs/DVDs
- 22-litre bin eliminates the need for frequent emptying

Description of the shredder

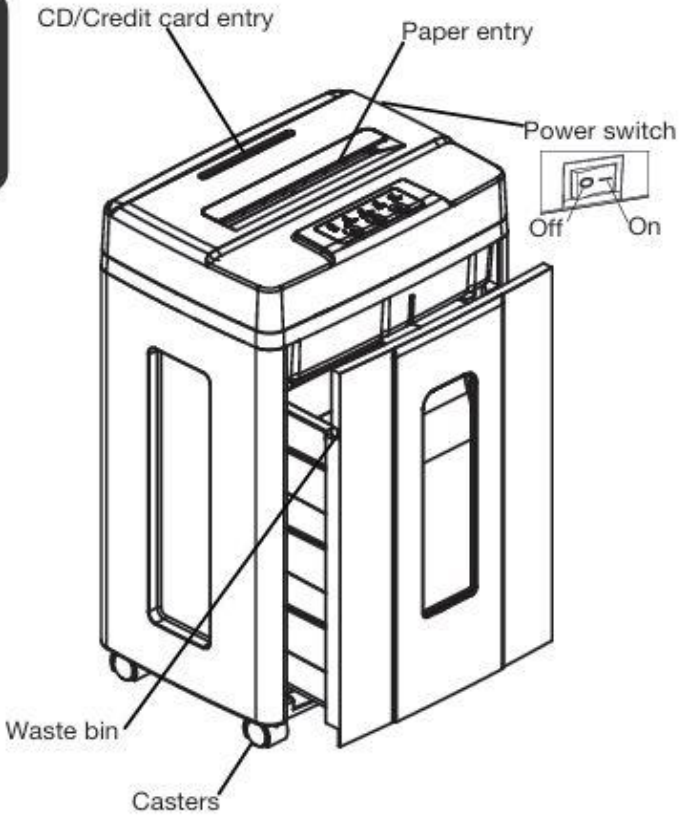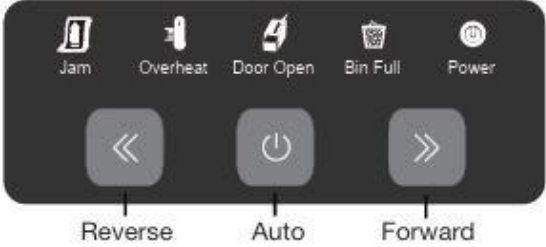

Warnings



CAUTION: KEEP THE APPLIANCE AWAY FROM CHILDREN AND PETS! Keep the shredder out of the reach of children.



DO NOT PLACE YOUR FINGERS TOO CLOSE TO THE FEED SLOT, AS SERIOUS INJURY MAY OCCUR. There is a danger of your fingers getting caught in the blade feeder.



AVOID LOOSE CLOTHING COMING INTO CONTACT WITH THE FEED SLOT. Be careful with loose parts of clothing, such as ties, when disposing of materials.



BE CAREFUL WITH HAIR WHEN OPERATING THE SHREDDER.



AVOID BRINGING DANGLING JEWELRY CLOSE TO THE FEEDER SLOT



NEVER spray any aerosol products in or near the shredder. NEVER dispose of flammable chemicals or materials that have been in contact with flammable chemicals (e.g. nail polish, acetone, gasoline) into the shredder basket. NEVER use petroleum or flammable oils or greases in or near the appliance, as some oils can ignite, causing serious injury. Lubricants and oils intended for shredder maintenance are acceptable.



The shredder is able to dispose of standard paper clips. However, it is recommended to dispose of them before disposing of them in order to prolong the life of the appliance.

STOP USING THE SHREDDER IF:

1. The blades of the shredder are blocked by paper or other data carriers.
2. The shredder motor makes loud and/or erratic noises during operation.
3. The shredder blades or paper guides are bent or damaged in any way.

Continued use of the shredder in any of the above cases may be potentially dangerous.

Installation

- The product must only be operated from the power source indicated on the label. If you are unsure of the type of power available, consult an electrician.
- Make sure that the power outlet is easily accessible so that you can easily connect the shredder to it.
- The shredder must only be operated in an upright position.
- To ensure proper ventilation of the shredder, place it at least 5 meters away from the machine.

Safety Instruction

1. Please read the following instruction before use. Save it for later.
2. Always unplug the shredder before moving, moving, servicing, or maintaining. The shredder housing can be wiped with a damp cloth and a little soap.
3. Do not use abrasives or petroleum-based cleaners.

4. Place the shredder as close to the power source as possible for quick and convenient connection of the device.
5. Before removing the waste container, turn off the power to the shredder. It is recommended to unplug the power cord before opening the waste bin.
6. Never place the appliance near a radiator or other heat source.
7. Position the shredder in such a location that nothing is resting on the power cord. Eliminate the possibility of stepping on the power cord.
8. If an extension cord is used with this product, make sure that the total current rating (expressed in amps) of the products connected to the extension cord does not exceed the current rating of the extension cord.
9. Do not attempt to service this product yourself, as opening or removing the covers may put the user at risk of injury. The manufacturer disclaims any liability for injuries caused by opening the device. Mechanical damage caused by opening the appliance may void the warranty.
10. Disconnect the device from the power supply and contact technical support if:
 - The power cord or plug is damaged
 - liquid has been spilled on the appliance
 - The product has been exposed to rain
 - the product does not work properly, despite following the instructions
 - The product has been dropped or its casing has been damaged
11. Empty the waste bin regularly to prevent the bin from filling up and overloading the machine.

12. The shredder allows you to dispose of paper and credit cards. However, you should dispose of one type of media at a time to prevent overloading.

Manual


NOTE: The shredder will only work with the basket supplied.

The supplied basket has a built-in safety feature that prevents the shredder from operating if another basket is used or installed incorrectly.

The shredder has sharp edges on the underside of the shredding head.

Before using the shredder, read the instruction manual. Inspect the appliance for damage or defect; Residual paper particles in the dustbin are normal and related to the product testing process.

Configuration

1. Place the appliance on level ground and plug the power cord into any easily accessible, grounded electrical outlet.
2. Make sure the waste bin is properly fitted.
3. Turn on the power switch located on the right side of the device.
4. Press the AUTO button 
5. The unit will be ready for operation when the power LED indicator lights up green.

Configuration Warnings:

1. All shredders have very sharp, exposed blades located under the top cover.

2. Make sure that the power cord is not damaged in any way and that the electrical outlet you are plugging the shredder into is working properly.
3. Sealed envelopes should never be shredded. Doing so may damage the shredder. Always remove and disassemble the contents of the envelope before disposing of them. NEVER dispose of envelopes, labels, or any materials with glue or sticky materials in the shredder, as this may lead to paper jams.
4. It is normal for the residual grease in the engine to burn off during the first few uses of the shredder. If you experience a burning smell or a slight smoke when using the appliance for the first time, this is normal and you can continue using the appliance.
However, if any of these symptoms occur after using the shredder several times, you should contact technical support for assistance.

Paper Disposal

To dispose of paper documents, place the sheets directly into the paper slot. Do not exceed the maximum number of sheets allowed to be shredded at the same time. The shredder will start the shredding process automatically.

Disposal of CDs/DVDs and plastic cards



In order to dispose of a plastic card or CD/DVD, the disc should be placed directly in the dedicated slot. A maximum

of 1 piece of media can be destroyed at a time. The shredder will automatically start shredding.

Overheating

The shredder is equipped with a temperature sensor to protect the motor from heat damage. If the sensor detects that the motor temperature is too high, the shredder will automatically shut down and a red LED indicator will illuminate to indicate that the unit is overheating. This is normal. If this happens, the shredder will need approx. 30 minutes to cool. When the overheating LED indicator turns off, you can continue to use the device normally.

Overload

If too much paper is inserted, the machine will automatically stop shredding and the red LED indicator will illuminate to indicate a jam. In this case, press the **Reverse** button  to remove the jammed paper. Pull out the paper and recount the pages to put the correct number of sheets back in the slot. Then press the **Forward**  button to resume shredding.

Full Container

The LED indicator will illuminate red when the disposed material container is full. The machine will stop shredding. Remove the container and empty it. Once this is done, you will need to reinsert the container into the enclosure.

Open Doors

The red LED indicator will illuminate when the bin is not closed properly. The machine will stop shredding. In this case, pull out and fully reinsert the waste bin. Disposal can then be continued.

Troubleshooting

If you encounter a problem while using your shredder, please check the list below. If you do not find a solution to your problem, please contact technical service.

IMPORTANT!

Do not open the shredder head for repairs. Doing so may expose the user to electric shock and contact with sharp blades. Additionally, doing so will void your warranty.

Problem:

The shredder does not start.

Solution:

- Make sure the shredder is plugged in.
- Make sure the AUTO button is turned on and the green LED is on.
- Make sure the appliance has not overheated. (See the Overheating section.)
- Make sure the container is empty and inserted correctly. If the bin is full, the red LED will illuminate.

Problem:

Paper is jammed in the paper tray.

Solution:

If a paper jam is detected in the paper tray, the shredder will stop recycling. Press the **Reverse** button to remove the jammed paper.

Problem:

The shredder stops abruptly during shredding.

Solution:

- Make sure the appliance has not overheated. (See the Overheating section.)
- Make sure the container is not full. (See the Full Container section.)
- Make sure the container is properly inserted and closed. (See the Open Doors section.)