

Manual

Price checker with QR scanner quickCHECK-A100

Table of contents

Specification:	2
Set contents:	3
Starting the device	4
Navigating Android	4
Going back	4
Go to the Home screen	4
Find all open apps	4
Switch between apps	5
Select and move items	5
Changing the Size and Direction of Elements	6

Specifications:

- **Warranty: 1 year**
- **Display Type: LED**
- **Light Source: 650nm**
- **Sensor: 752*480 CMOS**
- **Banknote compartment dimensions: W 7.2cm x L 18cm x D 3.5cm**
- **Screen: Touch**
- **Operating system: Android 11**
- **Wireless modules: WiFi**
- **Interfejs: USB*2, RJ45**
- **Power Supply: 100V-240V - 50/60Hz**
- **Operating Humidity: 15%~80%**
- **Operating Temperature: 0°C ~ 40°C**
- **Device dimensions: 20 x 26 x 8 cm**
- **Package dimensions: 40.5 x 25.5 x 15 cm**
- **Device weight: 1.5 kg**
- **Weight with packaging: 1.8 kg**
- **Odczytywane kody 1D: Code 128, EAN-13, EAN-8, Code 39, UPC-A, UPC-E, Codebar, Interleaved 2 of 5, ITF-6, ITF-14, ISBN, Code 11, UCC/EAN-128, GS: Databar, Matrix 2 of 5, Industrial 2 of 5, Standard 2 of 5, Plessey, MSI-Plessey**
- **Odczytywane kody 2D: PDF417, Data Matrix (ECC200, ECC000, 050, 080, 100,140), QR Code, Hanxin code**

Set contents:

- **Sprawdzarka cen quickCHECK-A100**
- **Power cord**
- **Mounting Studs, Screws & Washers**

Starting the device

To start the device, connect the cable included in the set to the power source, and then press the silver button on the side of the housing. The price checker is ready to work immediately after commissioning.

Navigating Android

Going back

Going back allows you to return to the screen you were using before. It allows you to go back several times all the way to the home screen.

In order to go back to the previous pages, you should:

With gesture navigation: Swipe in from the left or right edge of the screen

When navigating with two buttons: click the

Back 

When navigating with three buttons: click the Back icon



Go to the Home screen

With gesture navigation: Swipe up from the bottom of the screen

When navigating with two buttons: click the Home icon



When navigating with three buttons: click the Home icon



Find all open apps

On gesture navigation: Swipe up, hold, and release

When navigating with two buttons: swipe from bottom to half of the screen

When navigating with three buttons: click the Overview icon



This feature allows you to:

Close apps: To do this, swipe up on the app image

Open the app: click on the app image

Switch between apps

When navigating with gestures: at the very bottom of the screen, swipe from left to right

When navigating with two buttons: To switch between the two apps you have recently used, swipe right on the home button



When navigating with three buttons: click the Overview icon



. And then swipe right until the app you want appears. Finally, click on it.

Select and move items

To select an element or launch it, just click your finger

To type text, click your finger where you have typed text. The keyboard will automatically appear on the screen

To drag an element, place your finger in its place, hold it and move your finger on the screen to the place where you want the element to be. This way you can move applications.

To swipe, you need to swipe quickly on the screen without stopping.

Changing the Size and Direction of Elements

To resize an item, such as zooming in on the item, double-tap the screen

You can use two fingers to change the size, such as zooming out or enlarging., To make the size bigger, place two fingers on the screen and move them away from each other. To zoom out, just move two fingers towards each other.