

# Manual

---

Price checker with QR  
scanner

**quickCHECK-T100**

## Table of contents

Specification: .....	2
Kit contents:.....	3
Starting the device .....	4
Getting Around Android.....	4
Going backward.....	4
Go to the home screen .....	4
Find all open apps .....	4
Switch between apps.....	5
Select and move items .....	5
Change the size and direction of elements.....	6

## Specifications:

- **Warranty:** 1 year
- **Display Type:** LED
- **Light source:** 650nm laser
- **Sensor:** 752\*480 CMOS
- **Screen:** Touch
- **Operating System:** Android 11
- **Wireless Modules:** WiFi
- **Connectors:** HDMI/USB\*2/AUDIO OUT/RJ45
- **Power supply:** 100V-240V - 50/60Hz
- **Operating Humidity:** 15%~80%
- **Operating Temperature:** 0°C~40°C
- **Dimensions of the device:** 10/20 x 19 x 8 cm
- **Package dimensions:** 34 x 24.5 x 12 cm
- **Device weight:** 1.85 kg
- **Weight with packaging:** 2.1 kg
- **ID Codes Read:** Code 128, EAN-13, EAN-8, Code 39, UPC-A, UPC-E, Codebar, Interleaved 2 of 5, ITF-6, ITF-14, ISBN, Code 11, UCC/EAN-128, GS: Databar, Matrix 2 of 5, Industrial 2 of 5, Standard 2 of 5, Plessey, MSI-Plessey
- **2D Readable Codes:** PDF417, Data Matrix (ECC200, ECC000, 050, 080, 100,140), QR Code, Hanxin code

## Kit contents:

- quickCHECK-T100 price checker
- Power cord
- Studs, screws and mounting washers
- WIFI Antenna

## Starting the device

To start the device, connect the included cable to the power source, and then press the silver button located on the side of the case. The price checker is ready to work immediately after launching.

## Getting Around Android

### Going backward

Scrolling back allows you to return to the screen you were previously using. It allows you to go back several times until you reach the home screen.

In order to go back to the previous pages, you should:

**When navigating with gestures:** Swipe in from the left or right edge of the screen

**When navigating with two buttons:** click the

Back 

**When navigating with three buttons:** Click the Back icon



Go to the home screen

**When navigating with gestures:** Swipe up from the bottom of the screen

**When navigating with two buttons:** Click the Home icon



**When navigating with three buttons:** Click the Home icon



Find all open apps

**When navigating with gestures:** Swipe up, hold and release

**When navigating with two buttons:** swipe from the bottom to the middle of the screen

**When navigating with three buttons:** click the Overview icon



This feature allows you to:


**Close apps:** To do this, swipe the app image up

**Open the app:** To do this, click on the app's image

Switch between apps

**When navigating with gestures:** At the very bottom of the screen, swipe from left to right

**When navigating with two buttons:** To switch between the two most recently used apps, swipe right on the home button 

**When navigating with the three buttons:** click the Overview icon  . And then swipe right until the app of your choice appears. Finally, click on it.

Select and move items

To select an item or launch it, simply click with your finger

To enter text, click your finger where the text is typed. The keyboard will automatically appear on the screen

In order to drag an element, you need to put your finger in its place, hold it and without letting go, slide your finger across the screen to the place where you want the element to stay. You can move apps around this way.

To swipe, you need to swipe quickly across the screen, without stopping.

Change the size and direction of elements

To change the size of an item, for example, zoom in on an item, double-tap the screen with your finger

You can use two fingers to change the size, such as zooming out or zooming in., To make the size larger, you need to place two fingers on the screen and move them away from each other. On the other hand, to zoom out of the image, it is enough to move two fingers towards each other.