

Manual

Cash drawer **securePRO-415S**

Table of contents

Specifications:.....	2
Kit contents:.....	3
Connecting the drawer.....	4
Opening the drawer.....	4
Removing the drawer.....	5
Maintenance.....	6

Specifications:

- **Warranty:** 1 year
- **Color:** Black with Silver Front
- **Outer Material:** Extra Thickness Cold Rolled Steel and SECC
- **Surface Finish:** Textured Hybrid Powder Coating
- **Sliding system:** bearing guide
- **Number of compartments:** 8 compartments for banknotes, 8 compartments for coins
- **Banknote compartment dimensions:** 16.94 cm wide, 8.5 h
- **Additional features:** removable refill with separately removable banknote refill and coin refill with separately removable individual coin containers, two slots on the front
- **Interface:** RJ12
- **Lifespan:** up to 2 million duty cycles
- **External dimensions:** 41.5 W x 42.5 L x 13 cm
- **Package dimensions:** 48 x 46.7 x 19 cm
- **Product weight:** 15.7 kg
- **Weight with packaging:** 17 kg


Kit contents:

- Cash drawer
- RJ12 cable
- Two keys for the lock
- Manual

Drawer Connection

The cash drawer is equipped with a standard serial plug for direct connection to a POS terminal, cash register or computer (see figure below). When the printer finishes printing the receipt, the cash register automatically opens the cash drawer.

Connection:

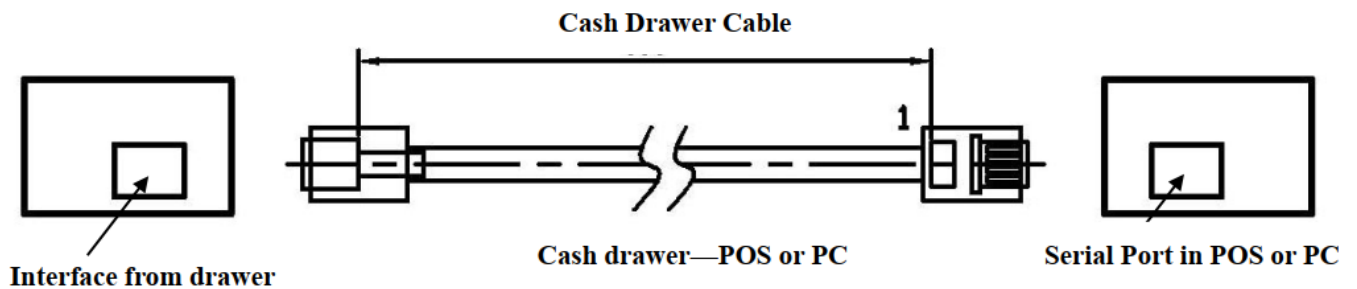


Opening the drawer

Lock positions

The cash drawer has 4 opening functions:


- **Manual Opening** - Turning the key to this position will open the drawer.
- **electronic opening** - the drawer is opened from the printer or cash register, after prior connection
- **Locked opening** - cannot open the drawer without a key
- **locked lock** - the drawer cannot be closed without a key

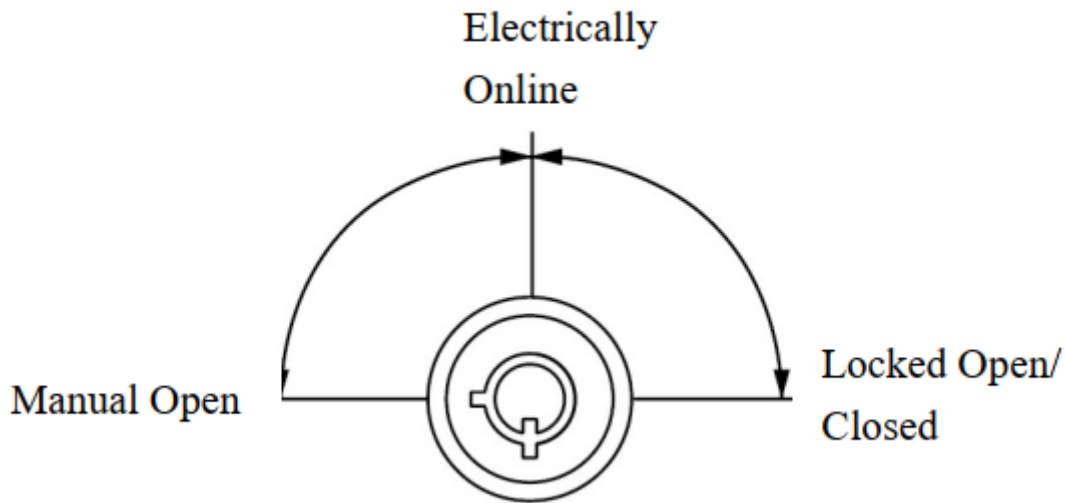

Warning: To reduce the risk of damage or breakage of the key, do not leave it in the lock during normal operation.

Removing the drawer

To remove the pull-out drawer from the appliance housing, open the cash drawer and remove the insert. The drawer should be pulled out as far as it will go. Release the locking handles on both sides of the zippers with both hands and pull out the drawer to remove it at the same time.

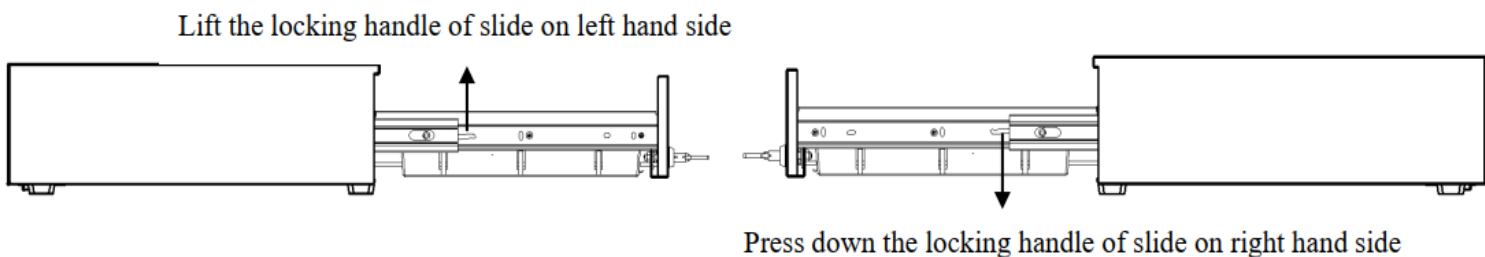

Maintenance

The cash drawer sliders should be cleaned and lubricated periodically. The frequency depends on the intensity of use and environmental conditions, but it is usually recommended to do this every three months. Use a dry, lint-free cloth to wipe away old grease and debris from the inner and outer zippers. Do not use water or any liquid cleaners. Using a clean applicator, apply a thin layer of lithium bearing grease to the inner and outer sliders. Move the guides several times to properly coat the polyurethane rollers and distribute the lubricant evenly.