

# Manual

---

## Longitudinal money box **securePRO-460**

## Table of contents

Specifications:.....	2
Kit contents:.....	3
Connecting the cash drawer .....	4
Opening the drawer .....	4
Maintenance.....	6

## Specifications:

- **Warranty:** 1 year
- **Color:** Black
- **Outer Material:** Thick Cold Rolled Steel, SECC
- **Surface Finish:** Textured Hybrid Powder Coating
- **Number of compartments:** 8 compartments for banknotes with snaps, 8 compartments for coins
- **Dimensions of banknote compartments:** 17.1 cm wide, 8.25 cm high
- **Lock:** two-position (with drawer open/close, manual opening, electronic opening)
- **Additional features:** removable insert with separately removable banknote compartments and individually removable coin containers, additional slot on the front
- **Interface:** RJ12
- **Service life:** up to one million duty cycles
- **External dimensions:** 46 W x 17 L x 10 H cm
- **Package dimensions:** 50.5 x 22 x 15.8 cm
- **Product weight:** 6.24 kg
- **Weight with packaging:** 6.77 kg

## Kit contents:

 
- Cash drawer
- RJ12 cable
- Two keys for the lock
- Manual

## Connecting the cash

drawer The cash drawer is equipped with a standard serial plug for direct connection to a POS or computer (see figure below).

When the receipt is printed, the printer/cash register automatically opens the cash drawer.

Connection:

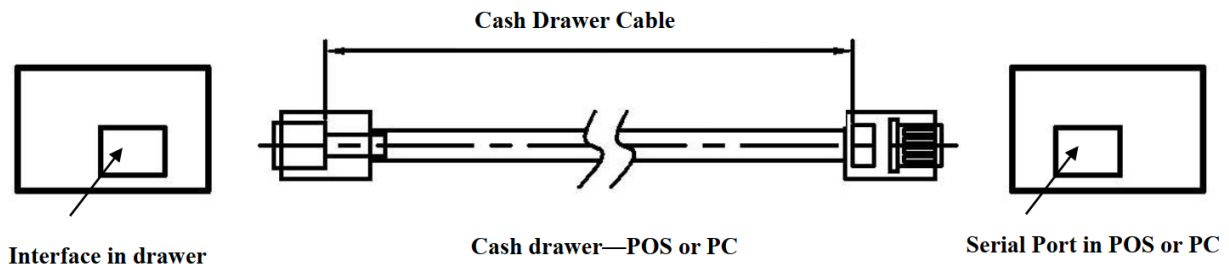


## Opening the drawer

### Lock positions


- **Option 1 – 2-Position Lock:** When the drawer is equipped with a 2-position lock, the key lock has 2 functions: **The left position is manual opening**, which means that turning the key to this position will open the drawer. **The middle position is the electronic opening position**, which means that the drawer is controlled by a printer or cash register.
- **Option 2 – 3-position lock:** When the drawer is equipped with a 3-position lock, the key lock has 3 functions: **The top position is manual opening**, which means that turning the key to this position will open the drawer. **The middle position is the electronic position**,

which means that the drawer is controlled by a printer or cash register. **The bottom position** means that the cash drawer can be locked when rotated to this position.

## Two-position lock

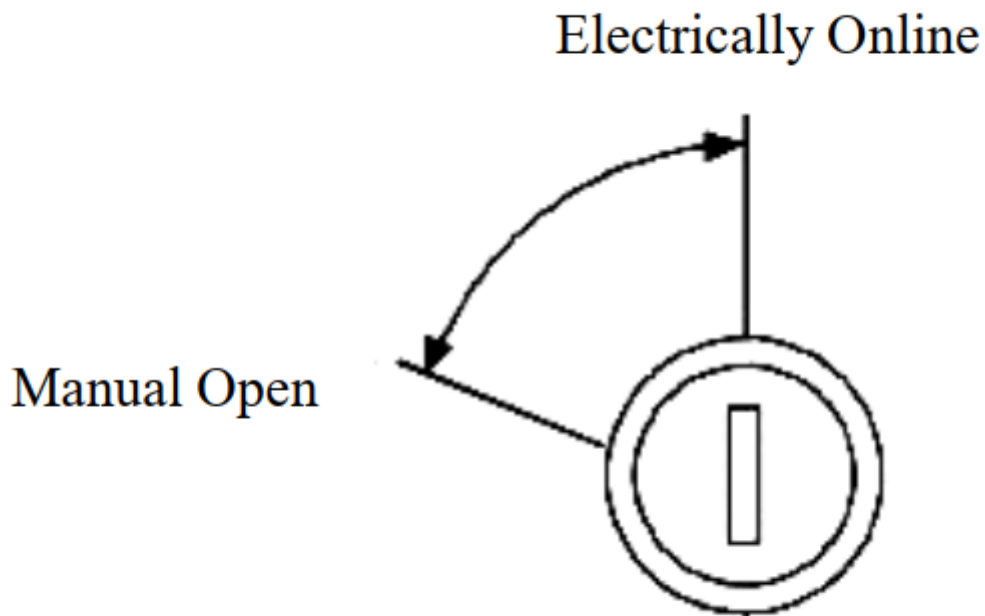

## Three-position lock

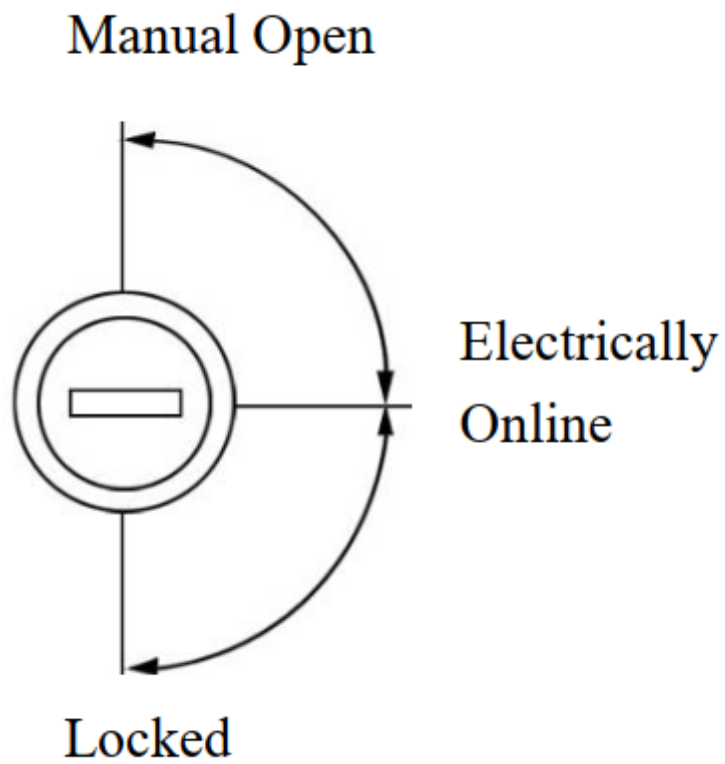 

**Warning:** To reduce the risk of damage or breakage of the key, do not leave it in the lock during normal operation.

## Maintenance

The cash drawer sliders should be cleaned and lubricated periodically. The frequency depends on the intensity of use and environmental conditions, but it is usually recommended to do this every three months. Use a dry, lint-free cloth to wipe away old grease and debris from the inner and outer zippers. Do not use water or any liquid cleaners. Using a clean applicator, apply a thin layer of lithium bearing grease to the inner and outer sliders. Move the guides several times to properly coat the polyurethane rollers and distribute the lubricant evenly.