

Manual

Drawer elongated, pull-
out

securePRO-495

Table of contents

Specifications:.....	2
Kit contents:.....	3
Connecting the cash drawer	4
Opening the cash drawer	4
Removing the drawer	5
Maintenance.....	6

Specifications:

- **Warranty:** 1 year
- **Color:** Black
- **Outer Material:** Extra Thickness Cold Rolled Steel and SECC
- **Surface Finish:** Textured Hybrid Powder Coating
- **Sliding system:** bearing guide
- **Number of compartments:** 8 compartments for banknotes, 8 compartments for coins
- **Banknote compartment dimensions:** 16.9 cm wide, 9 cm high
- **Lock:** three-position with four functions (drawer open/close, manual opening, electronic opening)
- **Additional features:** removable insert and coin tray with individually removable containers, additional slot on the front
- **Interface:** RJ12
- **Lifespan:** up to 2 million duty cycles
- **External dimensions:** 49.5 W x 30.5 L x 12.5 H cm
- **Package dimensions:** 54.5 x 36.7 x 20 cm
- **Product weight:** 11.5 kg
- **Product weight with packaging:** 12.5 kg


Kit contents:

- Cash drawer
- RJ12 cable
- Two keys for the lock
- Manual

Connecting the cash

drawer The cash drawer is equipped with a standard serial plug for direct connection to a POS or computer (see figure below). When the receipt is finished printing, the printer automatically opens the cash drawer.

Connection:

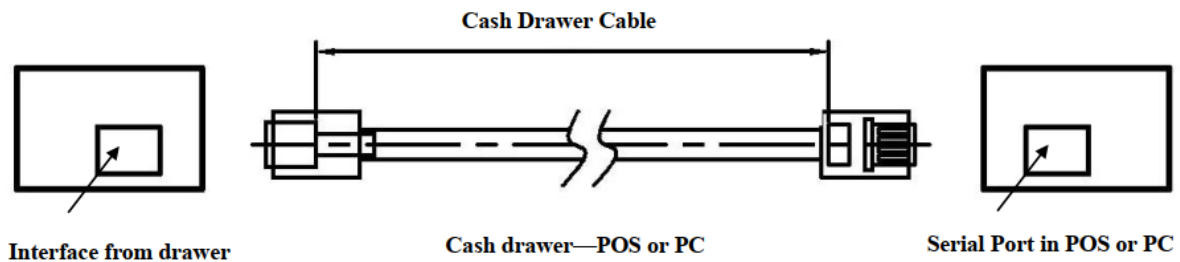


Opening the cash drawer

Lock positions

The cash drawer has 4 locking functions:


- **Manual Opening:** Turning the key to this position will open the drawer
- **Electronic opening:** the cash drawer is opened with the cash register after being connected
- **Locked opening:** Drawer cannot be opened with a key
- **Locked lock:** the drawer cannot be closed with a key

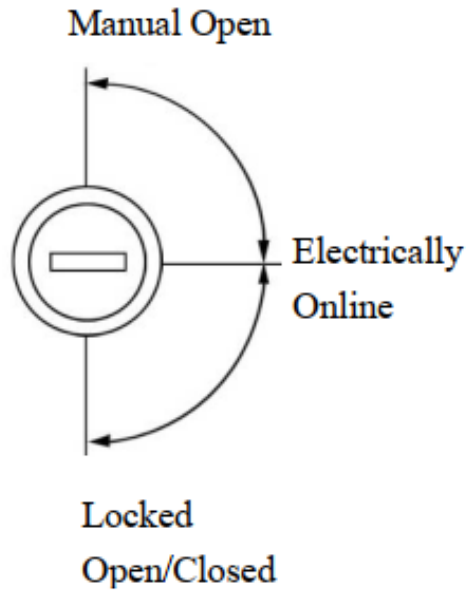

Warning: To reduce the risk of damage or breakage of the key, do not leave it in the lock during normal operation.

Removing the drawer

Open the cash drawer and remove the insert. Pull the drawer out as far as it will go. Release the locking handles on either side of the zippers with both hands and pull out the drawer to remove it at the same time.

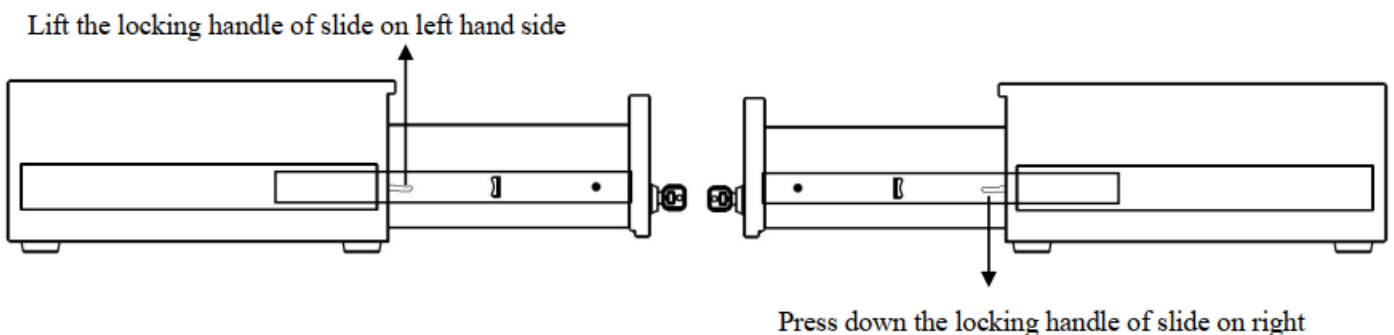

Maintenance

The cash drawer sliders should be cleaned and lubricated periodically. The frequency depends on the intensity of use and environmental conditions, but it is usually recommended to do this every three months. Use a dry, lint-free cloth to wipe away old grease and debris from the inner and outer zippers. Do not use water or any liquid cleaners. Using a clean applicator, apply a thin layer of lithium bearing grease to the inner and outer sliders. Move the guides several times to properly coat the polyurethane rollers and distribute the lubricant evenly.