

User Manual

Wireless Cyrillic
keyboard

typerCLAW-BC140GR

Table of contents

- Specifications: 3
- Set contents:..... 4
- Features: 4
- Pairing Your Keyboard..... 5
- Function keys:7
- Keyboard Usage: 8
- Troubleshooting:..... 8

Specifications:

- **Warranty:** 1 year
- **Housing colour:** dark grey
- **Material:** ABS
- **Keyboard Type:** Scissor Keyboard
- **Number of Keys:** 111
- **Keyboard layout:** QWERTY
- **Additional functions:** numeric keypad, function keys
- **Supported languages:** Polish, English, Russian, etc.
- **Supported OS:** Windows, Android, iOS
- **Wireless communication:** Bluetooth V3.0
- **Wireless operating range:** up to 10 m
- **Operating time:** up to 80 hours
- **Standby time:** up to 2 months
- **Charging time:** up to 2 hours
- **Power supply:** 180mAh lithium battery
- **Interface:** USB Type-C
- **Device dimensions:** 438 x 124 x 20 mm
- **Package dimensions:** 45 x 14.5 x 2.5 cm
- **Weight:** 550 g
- **Weight with packaging:** 700 g

Set contents:

- Wireless keyboard,
- USB charging cable,
- Manual.

Features:

- **Keyboard Type:** Scissor Keyboard
- **Keyboard layout:** QWERTY
- **Wireless communication:** Bluetooth V3.0
- **Number of Keys:** 111
- **Interface:** USB Type-C
- **Supported OS:** Windows, Android, iOS
- **Additional functions:** numeric keypad, function keys

Pairing Your Keyboard

Pairing with Tablets, Smartphones, Laptops, Computers:

Step 1: You should turn on the keyboard using the power slider. The blue LED will stay on for 4 seconds and then turn off.

Step 2: Press the "Connect" button, the LED will flash blue.

Step 3: Go to the settings menu on your tablet, laptop, smartphone, or other Bluetooth device, find the Bluetooth settings, and then turn on the BT option.

Step 4: In order to connect the keyboard to the target device, you should select the name from the "Bluetooth Keyboard" search list.

Pairing with iPad/iPhone

Step 1: You should turn on the keyboard using the power slider. The blue LED will stay on for 4 seconds and then turn off.

Step 2: Press the "Connect" button, the LED will flash blue.

Step 3: On your iPad/iPhone, select: Settings-> General-> Bluetooth-> On.











Step 4: Your iPad/iPhone should display the "Bluetooth Keyboard" in the list of available devices.

Step 5: Once you have selected the "Bluetooth Keyboard" device, the keyboard will be paired with your iPad/iPhone.

Remark:

- Only one device can be paired with the keyboard at a time.
- When paired for the first time, the device will automatically connect to the keyboard when powered on
- In case of a connection error, you should unpair with the target device and try to pair the keyboard with the target device again.

Function keys:

Klawisz	Fn+ (iOS)	Fn+ (Android)	Fn+ (Windows)	Bez Fn (Windows)
	Strona startowa	Strona startowa	Strona startowa	ESC
	Zmniejsz jasność	Powrót	Powrót	F1
	Zwiększ jasność	Email	Email	F2
	Wirtualna klawiatura	Menu	Prawy przycisk myszy	F3
	Zrzut ekranu	Odtwarzacz muzyki	Odtwarzacz muzyki	F4
	Blokada ekranu	Blokada ekranu	Blokada ekranu	F5
	Wyszukiwanie	Wyszukiwanie	Wyszukiwanie	F6
	Zmiana języka	Zmiana języka	Zmiana języka	F7
	Poprzedni utwór	Poprzedni utwór	Poprzedni utwór	F8
	Play/Pauza	Play/Pauza	Play/Pauza	F9
	Następny utwór	Następny utwór	Następny utwór	F10
	Wycisz	Wycisz	Wycisz	F11
	Głośność -	Głośność -	Głośność -	F12
	Głośność +	Głośność +	Głośność +	Del

The functions of the function keys may vary depending on the version of the operating system and devices

Keyboard Usage:

- 1.** Keep the keyboard away from humid environments and places with increased humidity (swimming pools, saunas, etc.). Also, do not expose the keyboard to water or rain.
- 2.** Do not expose the keyboard to too high or too low ambient temperatures.
- 3.** Do not expose the keyboard to sunlight for long periods of time.
- 4.** Do not place the keyboard near a flame (e.g. gas stoves, candles or fireplaces).
- 5.** Avoid objects with sharp edges that can damage the keyboard case.

Troubleshooting:

If you experience unwanted keyboard behavior:

- make sure that you have accidentally activated one of the keyboard functions
- Make sure the keyboard is charged and running
- Try pairing the target device with the keyboard again
- try pairing the keyboard with another target device

If the above actions are ineffective, please contact us via the form on the hdwr.pl website or by e-mail biuro@hdwr.pl.