

Manual

Low hook weight up to
50 kg

wagPRO-H50C

Table of contents

Specifications:	3
Set contents:.....	4
Enable:.....	4
Unit change:.....	4
Tare Function:.....	4
Weight value lock:.....	5
Weighing:	5
Disable:	5
Backlight:.....	6
Safety:.....	6

Specifications:

- **Warranty:** 1 year
- **Material:** ABS, stainless steel
- **Maximum nominal load:** 50 kg
- **Measurement accuracy:** 0-10kg: +/- 5g, 10-50kg: +/- 10g
- **Maximum permissible load:** 100% of nominal load
- **Display:** Digital LCD
- **Display backlight:** blue
- **Additional functions:** screen pause, weight tare, unit swapping, low battery indicator
- **Available weight units:** kg, lb, jin, oz
- **Power supply:** 2x AAA battery
- **Auto Power Off:** After 2 Minutes Of Inactivity
- **Device dimensions:** 11 x 5.7 x 2.1 cm
- **Package dimensions:** 17 x 9.5 x 3.3 cm
- **Device weight:** 150 g
- **Weight with packaging:** 160 g

Set contents:

- Scale with hook,
- 2 x AAA batteries,
- Manual.

Enable:

Place the scale in an upright position without weight on the hook. Press the "ON/OFF" button, the screen will show (8888). Wait 2-3 seconds for the screen to display (0.00 or 0.000) and the buzzer to beep at the same time. After that, the scale will be ready for weighing.

Unit change:

Unit Conversion (1 kg = 2.2 lb = 2 Jiri = 35 oz)

Hold the "UNIT" button for 2 seconds to select the unit between kg (kilograms), lb (pounds), Jin (half kilogram), oz (ounces) when powered on.

Tare Function:

When weighing bulk goods, place the container on the hook. Press the "TARE" button and the screen will display "0.00 or 0.000" and "TARE". The scale is ready to be weighed. Place the goods in the container. The screen will display the net weight of the goods only after the weighing is completed.

Weight value lock:

Press the "TARE" button for more than 2 seconds and the display will show "L_ON" and "L_OF". "L_OF" means the function is activated, the weight value will be locked, and the display will show "LOCK". Once locked, press the "ON/OFF" button to unlock again and you can perform another weigh-in. "L_OF" means the function is disabled and does not block the weighing value.

Weighing:

Turn on and wait for auto-zeroing, then hang the goods on the hook and the weight will be displayed. Wait until the goods are stationary (no longer shaking), the weight value will be locked if the weight value lock function is enabled, and "LOCK" appears on the screen. Then press the "ON/OFF" button to unlock the value and weigh more. The maximum load must not exceed the full load + 9d ("d" stands for weight pitch), otherwise the warning sign "O-LD" will be displayed.

Disable:

Press "ON/OFF" to turn off after unlocking (can not be turned off in the initialization state). When the device was in the locked state, press the "ON/OFF" button to exit, and then press again to turn it off. When the scale was turned on in the air temperature measuring state, follow the same steps to turn it off. The scale will automatically shut down after 120 seconds of inactivity.

Backlight:

The backlight will turn off if the scale is not started or the weight on the hook is stable for more than 3 seconds. When you press any button or change the ground on the hook, the backlight will turn on again.

Safety:

1. When powered on, the scale should be upright.
2. To weigh the ring, hold the ring or place aids on it. Do not hold the enclosure while weighing, as this will cause the deviation to be exceeded or the scale to be damaged.
3. Avoid strong shock or vibration during operation.
4. The housing is made of ABS plastic. Please use a soft cloth with water or detergent to clean, do not use corrosive substances such as benzene, solvent, etc.
5. When the screen shows "LO", which means the batteries are dead, they need to be replaced in time. Please remove the batteries to avoid leakage or damage to the circuitry if the scale will not be used for a long time.
6. Do not disassemble the scale by yourself if there is a fault that is not caused by man-made. You should send it back to our company.
7. When the weight on the hook exceeds the range, the display will show "O_Id" indicating overload. Remove the goods immediately, reduce the weight and weigh them again. Constant overloading will damage the scale.