

# User Manual

---

Kitchen spoon with scale

**wagPRO-K800G**

# Table of contents

Specifications: ..... 3  
Kit contents:..... 4  
Features: ..... 4  
Usage and available features: ..... 5  
Notes: ..... 6

## Specifications:

- **Warranty:** 1 year
- **Material:** ABS
- **Maximum load:** 800 g
- **Measurement accuracy:** 1 g
- **Display:** LCD 5-digit display
- **Additional features:** screen pause, scale tare, unit swap, auto shut-off
- **Available weighing units:** kg, lb, oz
- **Power supply:** CR2032 lithium battery
- **Battery capacity:** 250 mAh
- **Operating temperature:** -20 ~ 100°C
- **Dimensions of the device:** 23 x 9 x 5 cm
- **Package dimensions:** 16 x 15 x 5,5 cm
- **Weight of the device:** 90 g
- **Weight with packaging:** 135 g

## Kit contents:

- wagPRO-K800G,
- CR2032 lithium battery.

## Features:

- **Maximum load:** 800 g
- **Measurement accuracy:** 1 g
- **Display:** LCD, up to five numbers
- **Power supply:** lithium battery CR2032
- **Additional features:** pause screen, tare weight, convert units

## Usage and available features:

- 1) **Power button:** press the "ON/OFF" button to start the device after the bucket scale is in the horizontal position. After the system self-test, the display will show "0.0g" or "0.00oz", which will enter the weighing state and you can start weighing. After power on, press the "ON/OFF" button all the time to turn off. If without any operation and no big changes in weight, the spoon will automatically go to sleep state.
- 2) **Tare function button:** When placing containers or bags in the bucket scale scoop, press the "TARE" button to subtract the tare back to zero on the screen; If there are no items in the weighing scoop, press the "TARE" button to get the zero correction function, the screen will display zero to start weighing.
- 3) **Lock function button:** When the display is static, press the "HOLD" button to lock and display the weighing value.
- 4) **Unit switch button:** Press the "MODE" button to change the weighing unit between "g", "oz", "gn" and "ct".

## Notes:

- 1) It is not advisable to use the device in hot, humid or dusty conditions.
- 2) Due to the mechanics, keep the scale in a horizontal position to read the display, start and tare. Excessive tilting will affect accuracy.
- 3) If the power consumption is low, a battery sign will appear on the screen. This is an indication that the battery should be replaced.
- 4) To clean the balance, it is recommended to use a soft cloth with a small amount of water or detergent. It is forbidden to clean the balance with organic solvents or alkaline liquid.
- 5) Prevent water or other liquids from entering the balance, as this may cause a short circuit.
- 6) Remove the battery when not in use for a long time.