Manual

Membrane, wired keypad

typerCLAW-PC100

Table of contents

Specification: 3
Set contents: 4
Function keys: 4
Connecting the keyboard to your computer: 5
Safety: 7

Specification:

- **Warranty:** 1 year
- **Housing color:** black
- **Material:** ABS
- **Keyboard Type:** Membrane
- **Number of Keys:** 104
- **Keyboard layout:** QWERTY
- **Additional functions:** numeric keypad, function keys, Plug & Play
- **Supported languages:** Polish, English, etc.
- **Supported Operating Systems:** Windows
- **Interface:** USB 3.0
- **Cable length:** 1.25 m
- **Device dimensions:** 452 x 147 x 28 mm
- **Package dimensions:** 45.5 x 15 x 2.5 cm
- **Device weight:** 320 g
- **Weight of the device with packaging:** 550 g

Set contents:

- Wired keyboard with USB 3.0 cable

Function keys:

The function keys are located on the top row, labeled **F1–F12**. Each one has a specific function, which can vary depending on the software and operating system you use. Below you will find a description of the basic applications:

- **F1**: Use this key to open the help in most applications.
- **F2**: Used to rename the selected file or folder. Select the item, and then press F2.
- **F3**: Activates the search function.
- **F4**: When used in conjunction with the Alt key (Alt+F4), closes the current window or program.
- **F5**: Used for refresh. Use it in web browsers or apps to reload the content.
- **F6**: Helps you navigate between different interface elements, such as the address bar in browsers.
- **F7**: Enables the spell check feature in some word processors.
- **F8**: It can be used to enter safe mode in Windows when you start your computer.
- **F9**: Supports specific refresh functions in selected programs, e.g. spreadsheets.
- **F10**: Activates the menu bar in applications. Once pressed, move around using the arrows.

- **F11**: Toggles full-screen mode in web browsers.
- **F12**: Opens developer tools in browsers or other software-dependent features.


Additional indicators on the keyboard:There are also LED indicators on the keyboard that let you know when the following features are activated:


- **Num Lock**: Activates the numeric keypad.
- **Caps Lock**: Allows you to type in capital letters.
- **Scroll Lock**: Activated less frequently, depending on the software.

Note: The functions of the F1–F12 keys can be customized in the keyboard software or operating system settings.


Connecting the keyboard to your computer:

1. Make sure your computer is turned off before you start installing the keyboard.
2. Plug the keyboard's USB cable into your computer's USB port.
3. Turn on your computer. The operating system will automatically detect the device. There is no need to install drivers. When the blue LED light turns on, the keyboard is ready for use.

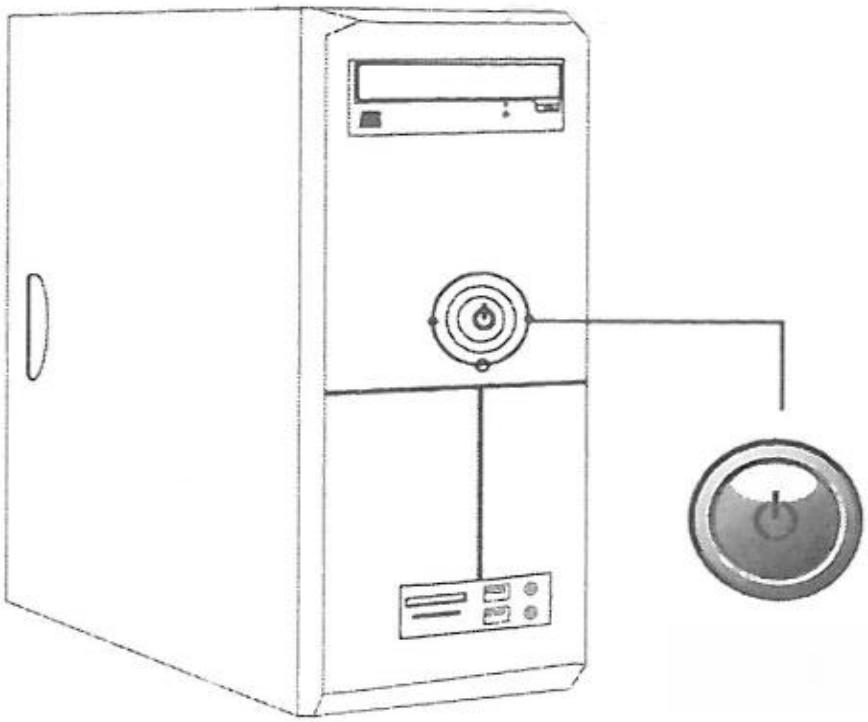

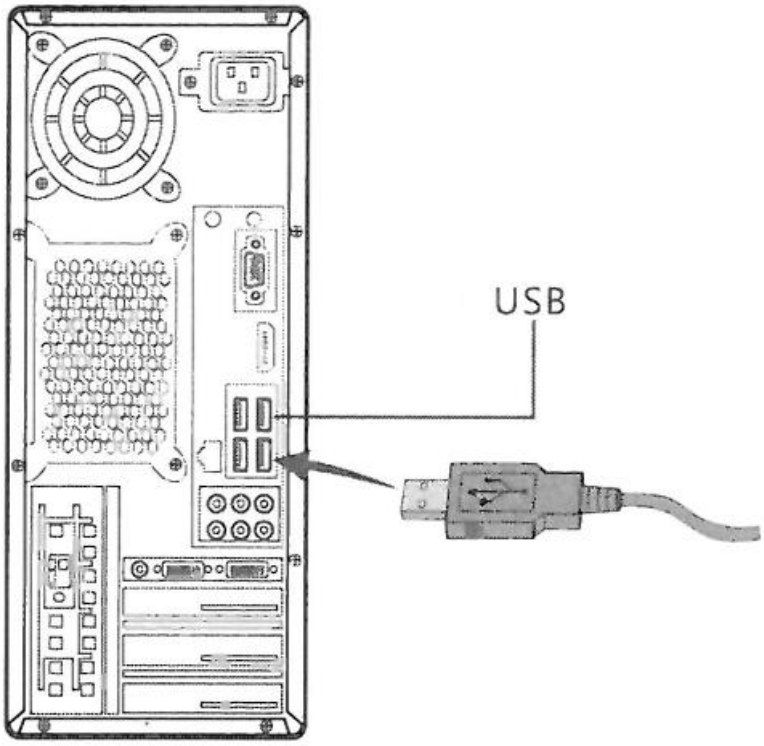

HDWR
Hardware for business
hdwrglobal.com

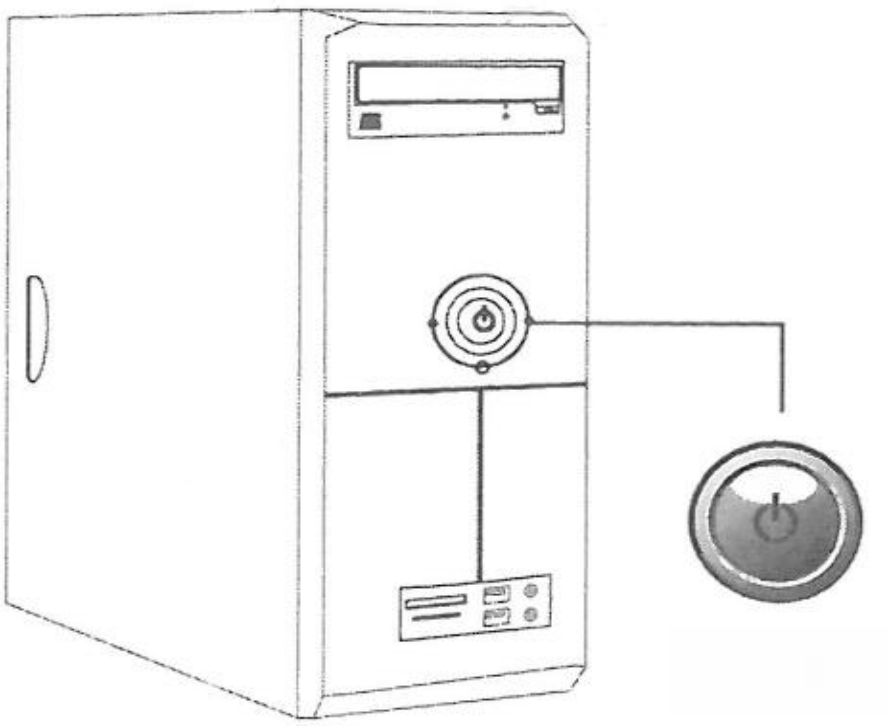

Safety:

- Do not expose components to liquid, moisture, or rain. Avoid using them near bathtubs, sinks, saunas, swimming pools or steam rooms.
- Do not expose the device to extremely high or low temperatures.
- Do not place it in areas exposed to direct sunlight.
- Do not use open flames, such as stoves, lighters, or fireplaces.
- Avoid using sharp objects to clean surfaces.