Manual

Bluetooth keyboard with numpad

tipperCLAW-BC100

HDWR
Hardware for business

Table of contents

Specifications: 2
Kit contents: 3
Buttons 4
LED signals 4
Work with devices 4
Bluetooth Pairing 5
Pairing with iPad/ iPhone 5
Pairing with tablets, smartphones, laptops, computers 5
Low battery alarm function 6
Power Saving Mode 6
Function keys 7
Important tips 8

Specifications:

- **Warranty:** 1 year
- **Color:** Grey
- **Material:** ABS
- **Keyboard type:** membrane
- **Number of Keys:** 102
- **Keyboard layout:** QWERTY
- **Additional Functions:** Numeric Pad
- **Supported languages:** Polish, English, French, Russian, etc.
- **Supported Operating Systems:** Windows, Android, iOS
- **Wireless Communication:** Bluetooth V3.0
- **Wireless Operating Range:** Up to 10m
- **Working time:** more than 72 hours
- **Standby Time:** About 4 months
- **Charging time:** up to 2 hours
- **Key lifespan:** up to 5 million clicks
- **Power Supply:** 180mAh Lithium Battery
- Interface: micro USB
- Dimensions of the device: 36.8 x 12.2 x 1.3 cm
- Package dimensions: 39.5 x 13.5 x 2.5 cm
- Device weight: 400 g
- Weight of the device with packaging: 500 g

Kit contents:

- Wireless keyboard
- USB cable
- Manual

Buttons

- **"On/Off" slider switch:** turn the keyboard on or off.
- **Bluetooth Connection Button:** When the device is turned on, you need to press the "Connect" button to put the keyboard in standby mode to connect to the target device (e.g., computer, smartphone, tablet, game console, etc.).

LED signals

When you press the "Connect" button, the will flash blue until a Bluetooth connection is established and will turn off when a connection is established.

Low battery: The blue LED flashes quickly when the battery is low and needs to be charged.

Power: The blue LED will illuminate for 4 seconds when the device is turned on.

Work with devices

- iPad, iPhone - all versions
- Bluetooth-enabled PCs or laptops with Windows XPNista/7/8/8.1/10
- iMac/Macbook with Bluetooth support and Mac OS X 10.2.8 or later (Warning! The keyboard may not be compatible with your Mac mini)
- Smartphones or tablets running Android 3.0 or higher (with Bluetooth HID)

Bluetooth Pairing

Pairing with iPad/ iPhone

- Step 1: You should turn on the keyboard using the power slider. The blue LED will be on for 4 seconds and then turn off.
- Step 2: Press the "Connect" button, LED will start flashing blue.
- Step 3: On your iPad/iPhone, select: Settings-> General-> Bluetooth-> On.
- Step 4: iPad/iPhone should display Bluetooth Keyboard" in the list of available devices.
- Step 5: After selecting the device 11Bluetooth Keyboard", the keyboard will be paired with your iPad/iPhone.

Pairing with tablets, smartphones, laptops, computers

- Step 1: You should turn on the keyboard using the power slider. The blue LED will be on for 4 seconds and then turn off.
- Step 2: Press the "Connect" button, the LED will start flashing blue.
- Step 3: Go to the settings menu on your tablet, laptop, smartphone, or other Bluetooth device, find the Bluetooth settings, and then turn on the BT option.
- Step 4: In order to connect the keyboard to the target device, select the name from the "Bluetooth Keyboard" search list.

Note: Only one device can be paired with the keyboard at a time. When paired for the first time, the device will automatically

connect to the keyboard when powered on. In case of a connection error, you should unpair with the target device and try to pair the keyboard with the target device again.

Low battery alarm function

When the keyboard is used for a long time and the battery level is low, the LED in the upper right corner will flash to alert the user when the device's battery needs to be charged.

Power Saving Mode

The keyboard will go to sleep after 10 minutes of inactivity. To reactivate it, press any key and wait 3 seconds.

Function keys


Klawisz	Fn+ (iOS)	Fn+ (Android)	Fn+ (Windows)	Bez Fn (Windows)
O O	Strona startowa	Strona startowa	Strona startowa	ESC
·ö·	Zmniejsz jasność	Powrót	Powrót	F1
B	Zwiększ jasność	Email	Email	F2
	Wirtualna klawiatura	Menu	Prawy przycisk myszy	F3
fJ	Zrzut ekranu	Odtwarzacz muzyki	Odtwarzacz muzyki	F4
i	Blokada ekranu	Blokada ekranu	Blokada ekranu	FS
Q	Wyszukiwanie	Wyszukiwanie	Wyszukiwanie	F6
	Zmiana języka	Zmiana języka	Zmiana języka	F7
	Poprzedni utwór	Poprzedni utwór	Poprzedni utwór	FS
▶ li	Play/Pauza	Play/Pauza	Play/Pauza	F9
»I	Następny utwór	Następny utwór	Następny utwór	F1O
◀	Wycisz	Wycisz	Wycisz	F11
◀>	Głośność-	Głośność-	Głośność-	F12
◀>))	Głośność+	Głośność+	Głośność+	Del

The functions of the function keys may vary depending on the version of the operating system and devices.

Note: To switch between Android, Windows, or iOS after successfully connecting to the corresponding device, press the Fn and Q (iOS), W (Android), or E (Windows) keys at the same time. Otherwise, the function key functions will only work partially.
On iOS, the language change feature doesn't work in a version lower than 9.2. To change the language, press .command + Spacebar.

Important tips

- Please read the instruction manual carefully and keep it
- Use the product only as described in this user manual.
- If the instructions are not followed, the manufacturer is not responsible for any damage that may result from improper use of the product.
- Repairs should be carried out by a qualified mechanic. Never attempt to repair the product yourself.
- Do not place heavy objects on the keyboard cover.
- Keep the product away from water, oil, chemicals, and organic liquids.
- To clean the product, it should be lightly wiped with a damp cloth.

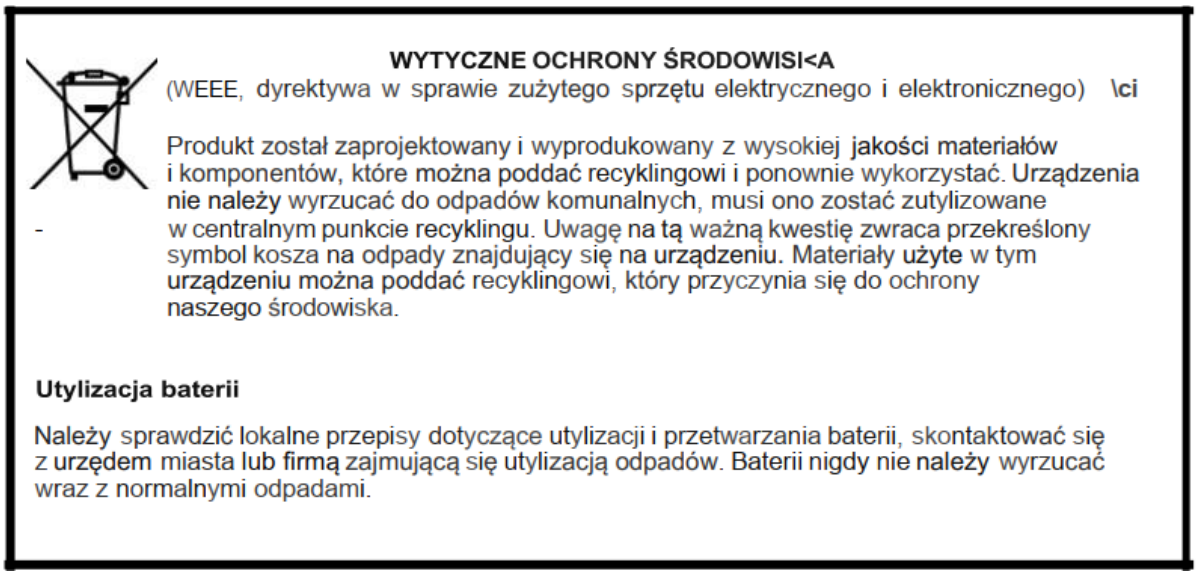

WYTYCZNE OCHRONY ŚRODOWISI<A

(WEEE, dyrektywa w sprawie zużytego sprzętu elektrycznego i elektronicznego) \ci

Produkt został zaprojektowany i wyprodukowany z wysokiej jakości materiałów i komponentów, które można poddać recyklingowi i ponownie wykorzystać. Urządzenia nie należy wyrzucać do odpadów komunalnych, musi ono zostać zutylizowane w centralnym punkcie recyklingu. Uwagę na tą ważną kwestię zwraca przekreślony symbol kosza na odpady znajdujący się na urządzeniu. Materiały użyte w tym urządzeniu można poddać recyklingowi, który przyczynia się do ochrony naszego środowiska.

-

Utylizacja baterii

Należy sprawdzić lokalne przepisy dotyczące utylizacji i przetwarzania baterii, skontaktować się z urzędem miasta lub firmą zajmującą się utylizacją odpadów. Baterii nigdy nie należy wyrzucać wraz z normalnymi odpadami.

Note: Apple™ is a trademark of Apple Corporation. Android™ is a trademark of Google Inc.

Windows™ is a trademark of Microsoft Corporation.

All images, logos, brand and product names used in this documentation are used as examples and illustrative images, and the ownership rights belong to the respective companies and their owners.

IMPORTANT:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide protection against harmful interference in the residential installation. The equipment may emit radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. If the equipment does cause interference to radio or television reception, the user is instructed to try to correct the interference by following these steps:

- change the orientation or position of the receiving antenna

- increasing the distance between the equipment and the receiver.
- Connecting the device to an AC outlet on a circuit different from the one to which the receiver is connected.
- consult the dealer or an experienced radio and television technician for assistance
- Changes or modifications not expressly approved by the party responsible for compliance may affect the validity of the warranty.