Manual

Bluetooth foldable keyboard with touchpad

typerCLAW-BS120

HDWR
Hardware for business

Table of contents

Specifications: 2
Kit contents: 3
Keyboard Description 4
Pairing via Bluetooth 4
Leds 5
Function keys 6
Touchpad Features 8
Using the keyboard 8


Specifications:

- **Warranty:** 1 year
- **Color: Silver**
- **Material:** ABS
- **Keyboard type:** membrane
- **Number of Keys:** 64
- **Keyboard layout:** QWERTY
- **Additional functions:** touchpad, multipairing, function keys
- **Supported languages:** Polish, English, French, Russian, etc.
- **Supported Operating Systems:** Windows, Android, iOS
- **Wireless Communication:** Bluetooth V3.0
- **Wireless Operating Range:** Up to 10m
- **Working time:** up to 100 hours
- **Standby Time:** Up to 30 days
- **Charging time:** up to 2 hours
- **Key lifespan:** up to 5 million clicks
- **Power Supply:** 180mAh Lithium Battery
- **Interface:** micro USB
- **Dimensions unfolded:** 31.5 x 9.1 x 0.6 cm
- **Folded dimensions:** 16.1 x 9.1 x 1.2 cm
- **Package dimensions:** 19 x 10 x 3 cm
- **Device weight:** 160 g
- **Weight of the device with packaging:** 250 g

Kit contents:

- Foldable keyboard
- USB charging cable
- Manual

Keyboard Description

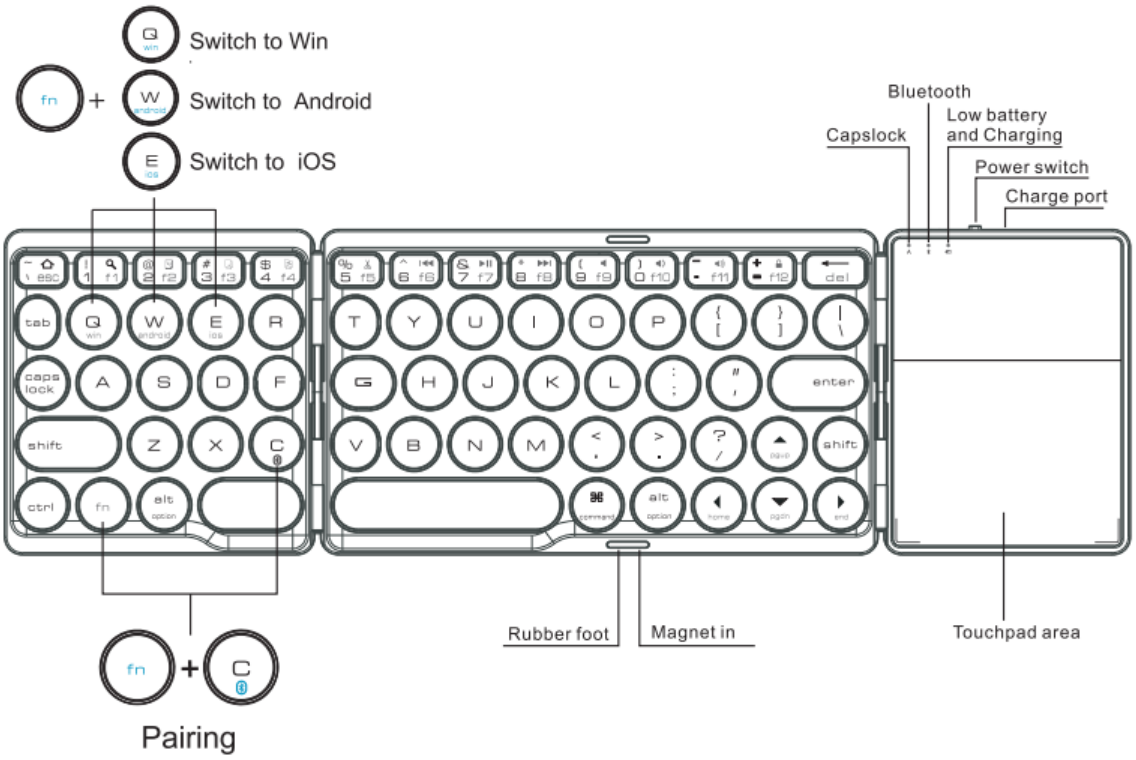

Pairing via Bluetooth

1. Slide the switch to ON to turn on the keyboard. Then press Fn + C to start pairing mode.
2. On the target device, go to the Bluetooth settings and start the device search. Select a device named "Bluetooth keyboard" to pair the keyboard with the target device.
3. Use the keyboard to type the code that returns the target device and confirm with the ENTER key. After a while, the keyboard will be paired and ready to use.

Leds

- **Connection:** With the keypad on, the blue LED flashes when the device is paired.
- **Charging:** When the keyboard is plugged in, the red LED is on until the battery is fully charged.
- **Low Voltage:** When the voltage drops below 3.2V, the blue LED will flash


Note: To prolong battery life, switch off the equipment when the device is not used for a long time.

Function keys

fn + E (iOS) Switch to iOS			fn + W (android) Switch to Android		
fn+	=	function	fn+	=	function
esc		Home	esc		Desk top
1 f1		Serch	1 f1		Serch
2 f2		Selcet all	2 f2		Selcet all
3 f3		Copy	3 f3		Copy
4 f4		Paste	4 f4		Paste
5 f5		Cut	5 f5		Cut
6 f6		Prev	6 f6		Prev
7 f7		Break	7 f7		Break
8 f8		Next	8 f8		Next
9 f9		Mute	9 f9		Mute
0 f10		Volume -	0 f10		Volume -
- f11		Volume +	- f11		Volume +
= f12		Lock screen	= f12		Lock screen
	del	Delete		del	Delete

fn + win Switch to Win					
fn+Shift+	=	function	fn+	=	function
~ ` esc		Home page	~ ` esc		esc
! 1 f1		Serch	! 1 f1		f1
@ 2 f2		Selcet all	@ 2 f2		f2
# 3 f3		Copy	# 3 f3		f3
$ 4 f4		Paste	$ 4 f4		f4
% 5 f5		Cut	% 5 f5		f5
^ 6 f6	⏮	Prev	^ 6 f6	⏮	f6
& 7 f7	⏯	Break	& 7 f7	⏯	f7
* 8 f8	⏭	Next	* 8 f8	⏭	f8
(9 f9	🔇	Mute	(9 f9	🔇	f9
) 0 f10	🔉	Volume -	) 0 f10	🔉	f10
_ - f11	🔊	Volume +	_ - f11	🔊	f11
+ = f12	🔒	Lock screen	+ = f12	🔒	f12
del	Delete	Delete		del	← (Backspace)

Touchpad Features

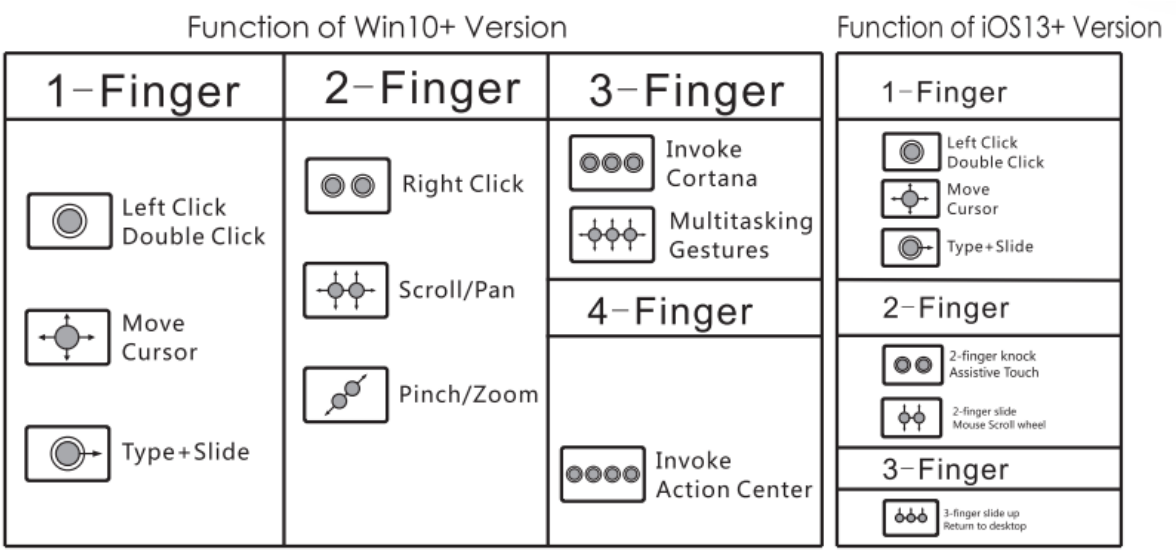

Note: Due to system limitations, touchpad features may only be available with iOS 13 or later software versions.

Using the keyboard

1. Keep the keyboard away from humid environments and places where there is increased humidity. Also, do not expose the keyboard to direct rain or water.
2. Do not expose the keyboard to too high or too low temperatures.
3. Do not expose the keyboard to sunlight for long periods of time.
4. Do not place the keyboard near flames (e.g. gas stoves, candles and fireplaces).
5. Avoid using objects with sharp edges near the keyboard, which could damage the device case.