

Manual

Triple monitor mount
with two USB ports

SolidHand-BG03SU

Table of contents

Specifications:	3
Set contents:.....	4
Assembly:.....	4
Safety:.....	8



Specifications:



- **Warranty:** 1 year
- **Color:** Silver
- **Material:** Aluminum, Steel, Plastic
- **Surface Finish:** Powder Coating
- **Number of monitors:** 3
- **Min. monitor diagonal:** 17"
- **Max. monitor diagonal:** 27"
- **VESA Standard:** 75x75, 100x100
- **Weight per monitor:** 7 kg
- **Height adjustment:** Gas spring assisted
- **Arm swivel range:** +90° ~ -90°
- **Monitor swivel range:** +180° ~ -180°
- **Monitor tilt range:** +40° ~ -40°
- **Max. arm overhang:** 748 mm
- **Installation:** Clamp, grommet
- **Handle dimensions:** 15.03 x 17.9 x 72.7 cm
- **Package dimensions:** 60.2 x 45.6 x 13.8 cm
- **Handle weight:** 8.95 kg
- **Weight of the handle with packaging:** 9.85 kg


Set contents:


- Monitor mount,
- screws and mounting washers,
- Installation instructions


Assembly:

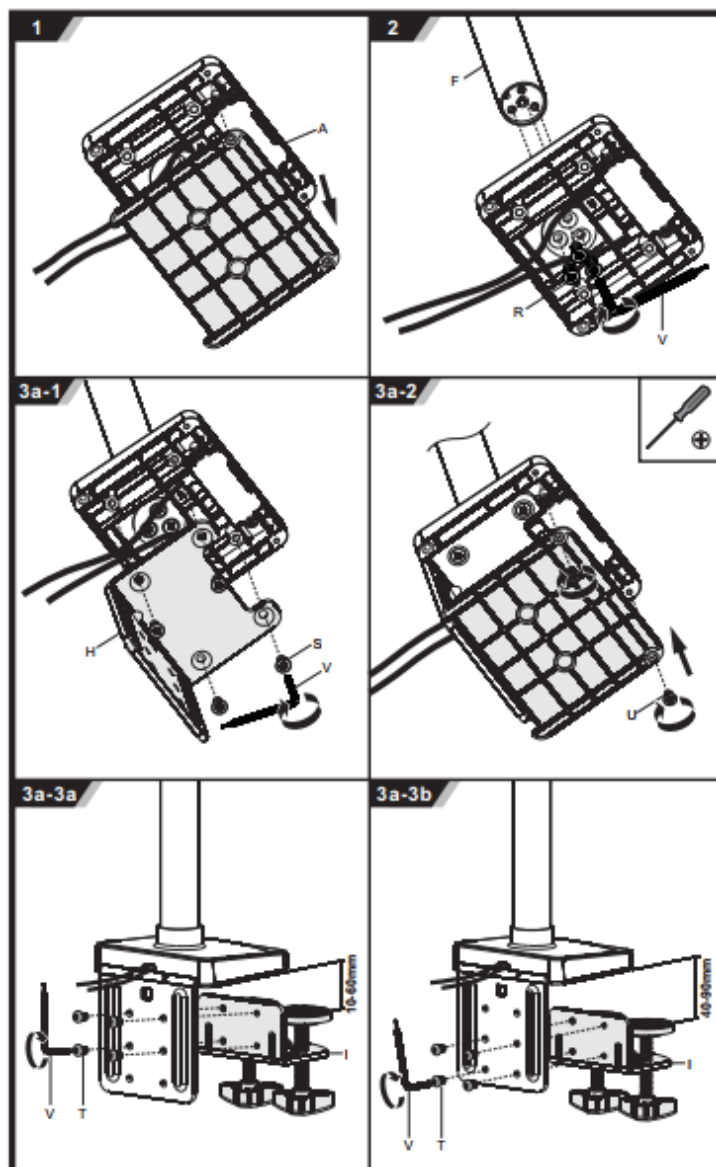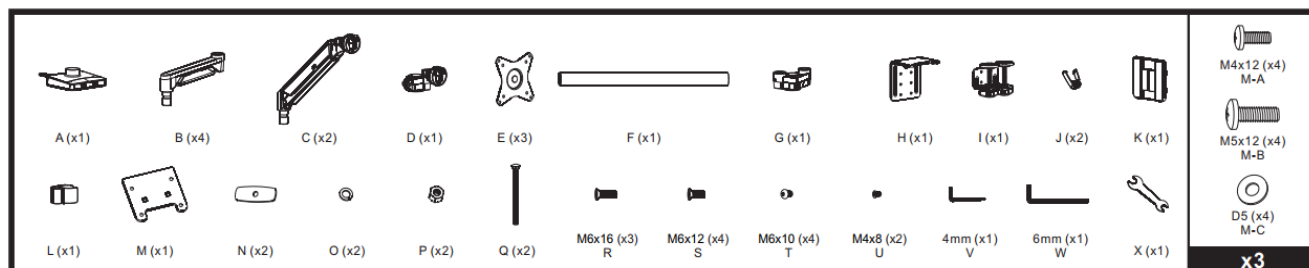

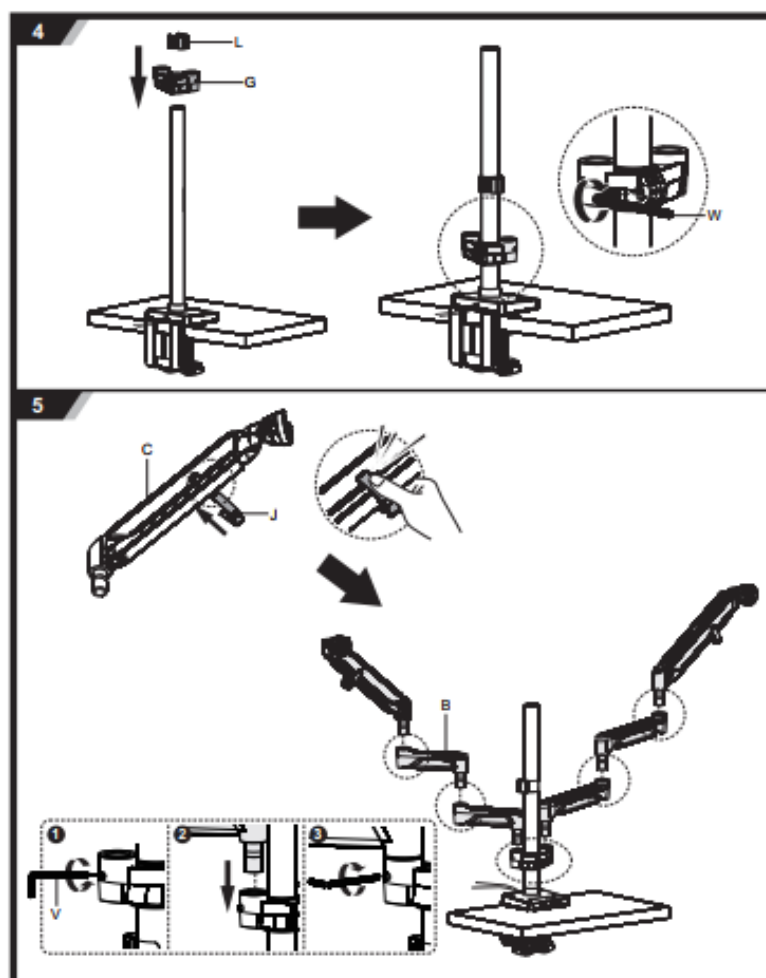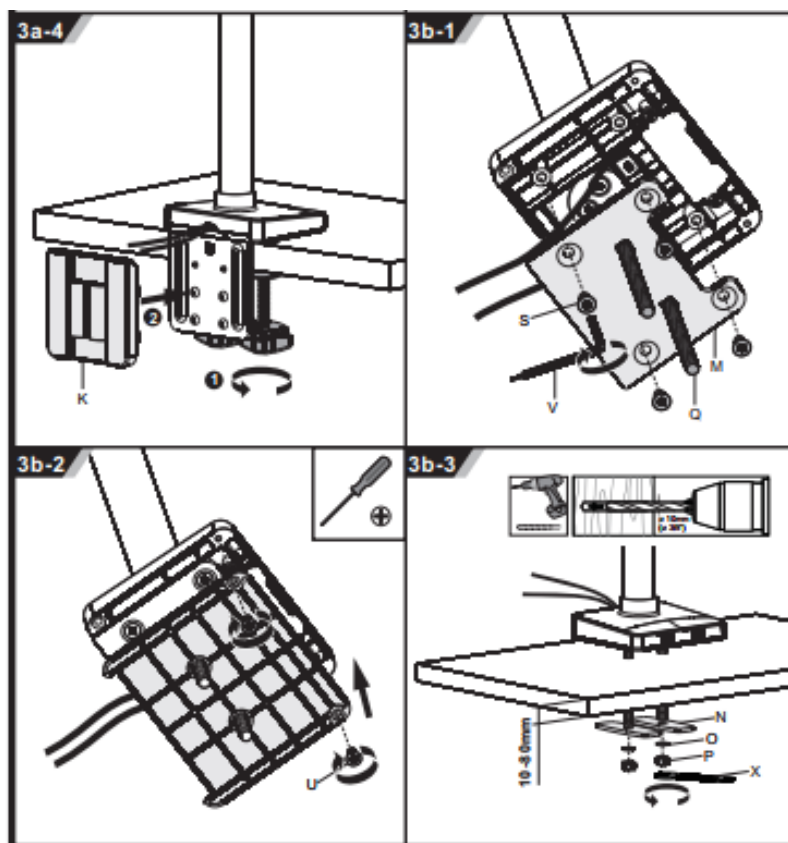

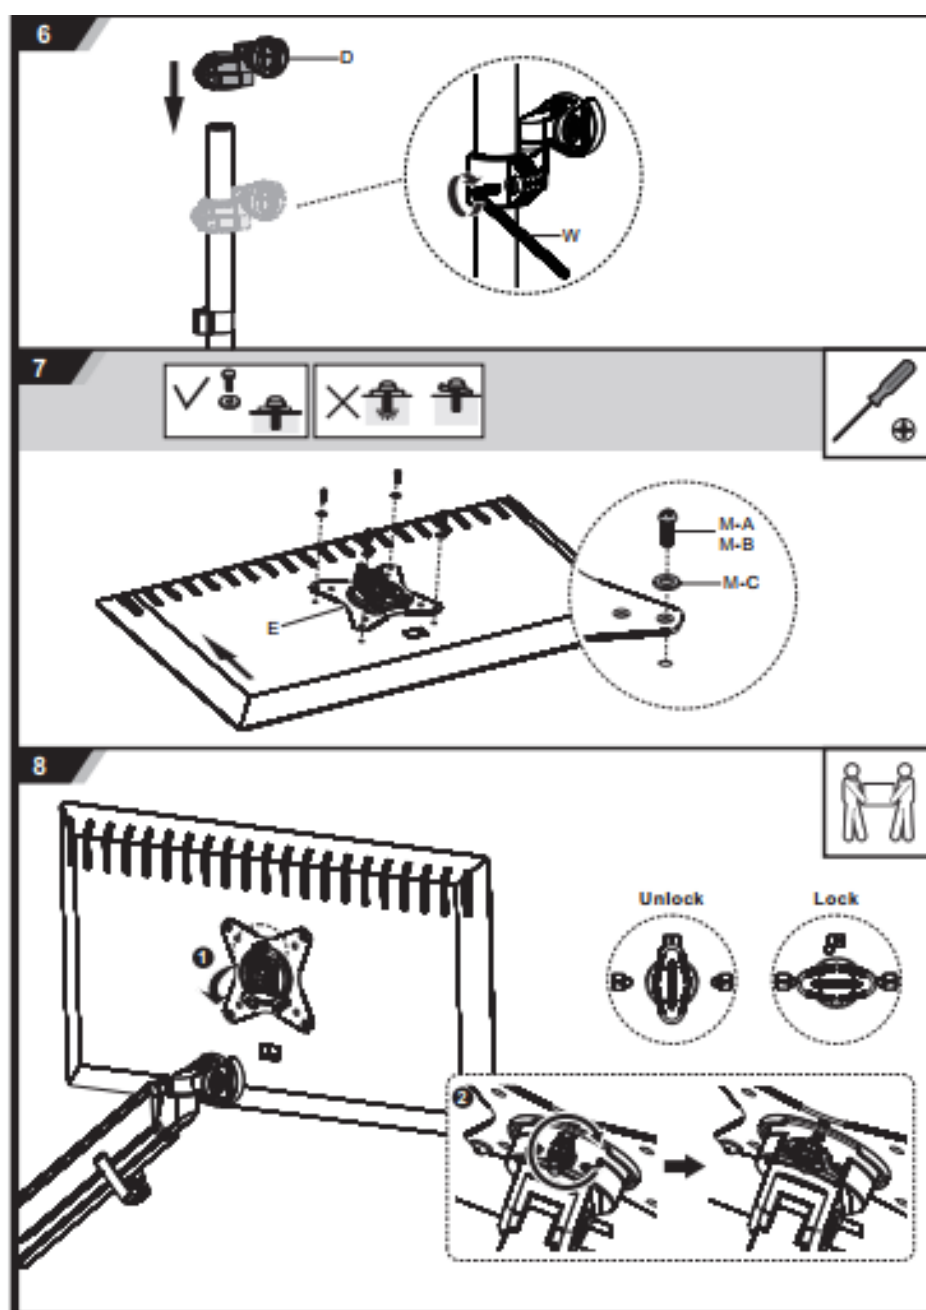

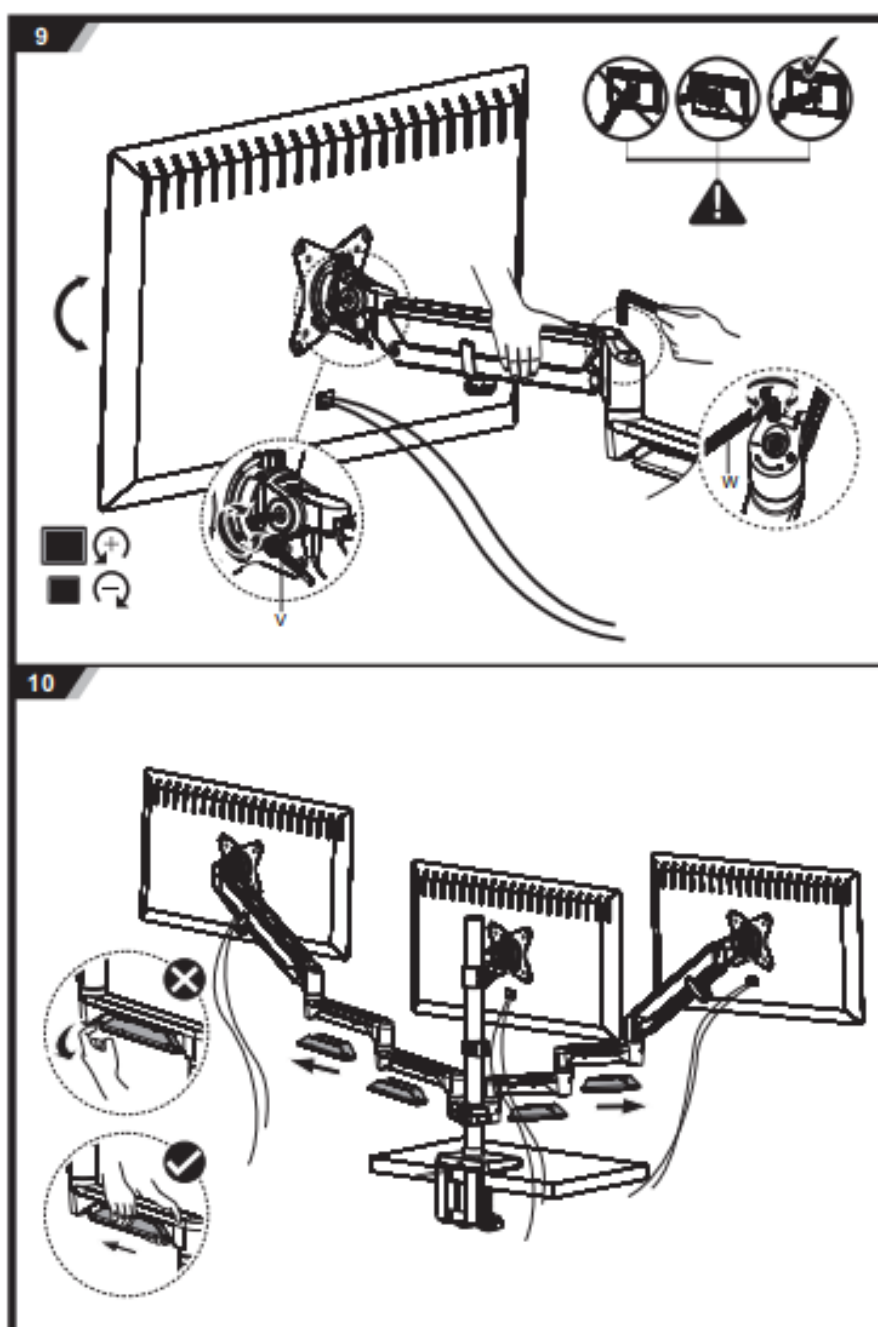

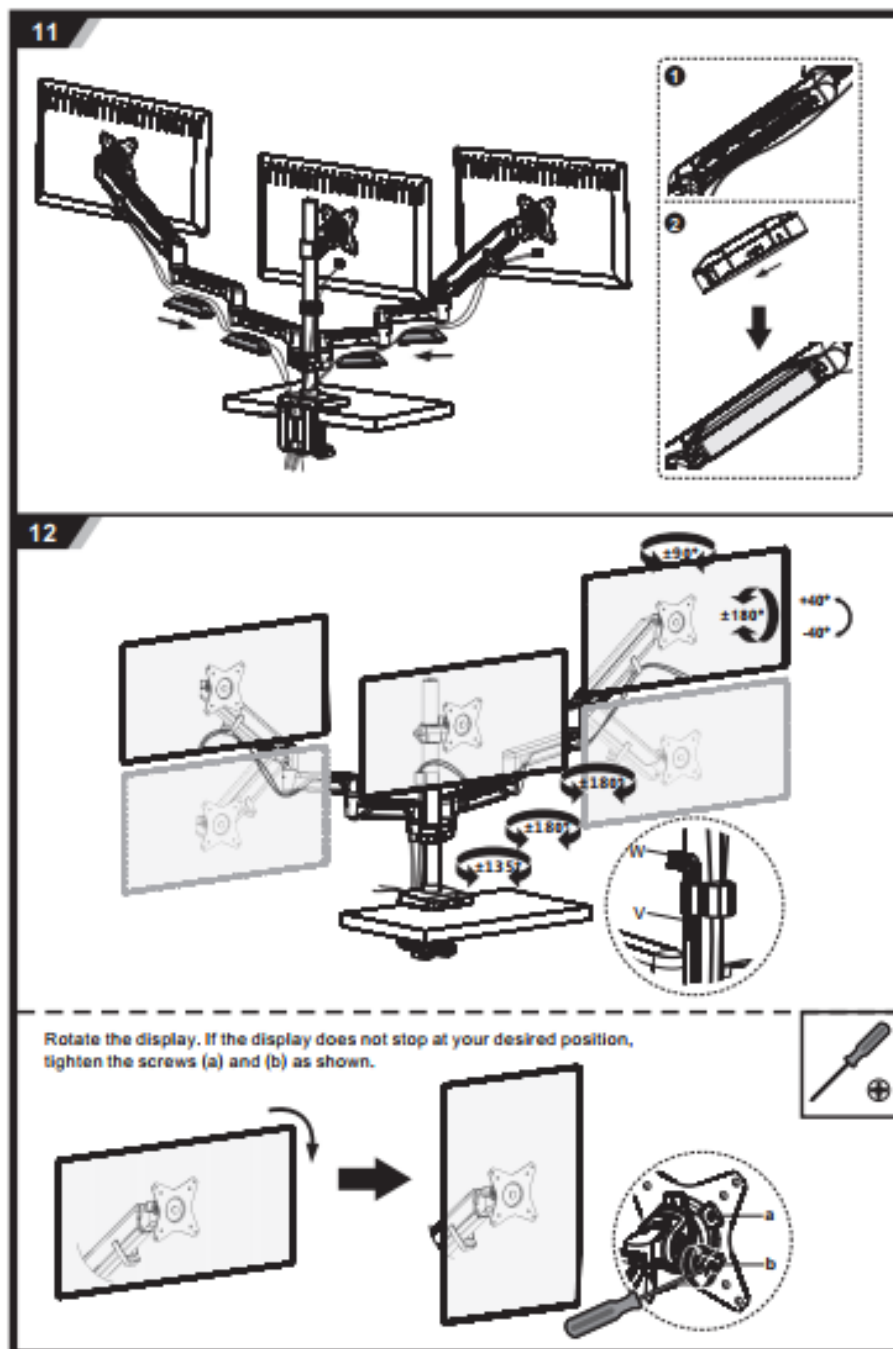

Safety:

CAUTION: Using the product with heavier weights than indicated may cause instability and possible injury.

- Please follow the assembly instructions carefully. Incorrect installation can lead to damage or serious injury.

- Use appropriate protective equipment and tools. The product should only be installed by professionals.
- Ensure that the mounting surface can securely support the combined weight of the device and all attached items and components.
- Use the mounting screws provided and **DO NOT OVER-TIGHTEN the** mounting screws.
- The product contains small parts that may pose a choking hazard if swallowed. Keep these items away from children.
- The product is intended for indoor use. Using it outdoors may lead to damage to the product and personal injury.

IMPORTANT: Make sure you receive all parts according to the component checklist before installation. If any parts are missing or defective, please contact your dealer for replacement.

MAINTENANCE: Check that the product is safe and stable during use at regular intervals (at least once every three months).