

User Manual

AZTEC QR & Bluetooth barcode scanner with scanning glove HD750G

Table of contents

- Specifications: 3
- Set contents:..... 5
- Features: 5
- Factory Setting..... 6
- Light signal statuses 6
- Bluetooth connection setting..... 6
- Bluetooth Connection Name Settings 8
- Beep settings..... 9
- Vibration settings..... 9
- Auto-off settings.....10
- Prefix and Suffix Settings 11
- Endpoint settings.....12

Specifications:

- **Warranty:** 2 years
- **Material:** PC+TPU
- **Scanning method:** manual (push-button)
- **Sensor Type:** CMOS
- **Scan confirmation:** beep, light and vibration
- **Processor:** ARM Cortex 32-bit
- **Light Source:** 610nm LED
- **Wireless Communication:** Bluetooth
- **Wireless range:** 30 meters
- **Power supply:** DC5V/ 2A
- **Working Current:** 300mA
- **Print Contrast:** ≥20%
- **Battery Capacity:** 550mAh
- **Working time:** 7 hours
- **Standby Time:** 30 days
- **Charging Time:** 2 hours
- **Drop resistance:** 1.5 meters
- **Ingress Protection:** IP65
- **Operating temperature:** -5°C - 50°C
- **Storage temperature:** -20°C - 60°C
- **Operating Humidity:** <95% (non-condensing)
- **Device dimensions:** 5.7 × 4.2 × 2.4 cm
- **Package dimensions:** 12.5 x 5 x 9.5 cm
- **Product weight:** 450 g
- **Weight with packaging:** 600 g
- **Readable 1D codes:** UPC-A, UPC-E, UPC-E1, EAN-8/JAN-8, EAN-13/JAN-13, Bookland EAN, ISSN EAN, EAN/JAN Zero Extend, UCC Coupon Extended Code, UPC Reduced Quiet Zone, Code 128, GS1-128 (formerly UCC/EAN-128), ISBT 128,

ISBT Concatenation, Check ISBT Table, Code 128 Reduced Quiet Zone, Code 39, Trioptic Code 39, Convert Code 39 to Code 32, Code 32 Prefix, Code 39 Check Digit Verification, Transmit Code 39 Check Digit, Code 39 Full ASCII Conversion, Code 39 Reduced Quiet Zone, Code 93, Code 11, Transmit Code 11 Check Digits, Interleaved 2 of 5 (ITF), Transmit 1 2 of 5 Check Digit, Convert 1 2 of 5 to EAN-13, Febraban, 1 2 of 5 Reduced Quiet Zone, Discrete 2 of 5 (DTF), Codabar (NW - 7), CLSI Editing, NOTIS Editing, Codabar Mod 16 Check Digit Verification, Transmit Codabar Check Digit, MSI, Transmit MSI Check Digit(s), MSI Reduced Quiet Zone, Chinese 2 of 5, Matrix 2 of 5, Matrix 2 of 5 Check Digit, Korean 3 of 5, GS1 DataBar Omnidirectional, GS1 DataBar Limited, GS1 DataBar Expanded, Convert GS1 DataBar to UPC/EAN/JAN, CC-C, CC-A/B, TLC-39, GS1-128 Emulation Mode for UCC/EAN Composite Codes

- **Readable 2D codes:** PDF417, MicroPDF417, Code 128 Emulation, Data Matrix, GS1 Data Matrix, Maxicode, QR Code, GS1 QR, MicroQR, Aztec, Han Xin, Grid Matrix, DotCode, DotCode Prioritize, Transmit Macro PDF Control Header, US Postnet, US Planet, UK Postal, Japan Postal, Australia Post, Netherlands KIX Code, USPS 4CB/One Code/Intelligent Mail, UPU FICS Postal, Mailmark

Set contents:

- QR and barcode scanner
- Scanning glove
- USB charging cable
- Lanyard with key ring
- Manual

Features:

- Quickly scan a wide range of codes from a distance
- Comfortable scanning glove with button on index finger
- Ability to read codes from LCD screens and displays of mobile devices
- Scanning in two ways: with a button on the glove or with a touch sensor on the reader's housing
- Two options for mounting the scanner: on a glove worn on the hand or on a key ring with a lanyard that can be rolled out

Factory Setting




Light signal statuses

Diode color	Description
Green LED flashing once	Successful Scan
Green LED flashes every 1s	Low battery
Blue LED flashes quickly	Bluetooth HID mode
Blue LED flashes slowly	Bluetooth SPP mode
Blue LED flashing 2 times	Bluetooth BLE mode
Blue LED off (when paired)	Successful pairing via Bluetooth
The red LED is still lit	Charging the battery
Red LED off while charging	Battery fully charged

Bluetooth connection setting

Scan the barcode below to enter the corresponding Bluetooth mode.



Bluetooth HID



Bluetooth SPP



Bluetooth BLE

Bluetooth Pairing and Connection

1. Quick connection via NFC

The scanner supports fast pairing and connecting to mobile phones or NFC-enabled devices.

- **Step 1:** Turn on NFC on your phone or device.
- **Step 2:** Place the NFC tag of your phone or device near the position of the NFC tag of the scanner
- **Step 3:** Click "Yes" as prompted by your phone to pair and connect.

2. BIM APP and Bluetooth Scanner MAC Pairing Connection

If there is an internal Bluetooth MAC address on the scanner, you can download the BIM application with your mobile phone and open it by clicking on the scan button on the top right corner of the home page, select "Scanner MAC" and then scan the Bluetooth MAC address to Pairing.

3. The mobile phone searches for the scanner's Bluetooth address to pair the connection. Open the Bluetooth settings

of the mobile phone or the Bluetooth search function in the BIM software, search for the scanner's Bluetooth MAC address for pairing the connection.



4. **The scanner scans your phone's MAC address to pair the connection.** If the scanning engine reads the barcode on the screen, you can download the "scan and connect" app and set the scanner to Bluetooth HID mode at the same time. Open the app, scan the Bluetooth MAC address of the mobile phone displayed on the screen with the scanner for pairing and connection.

Note: When your phone pairs correctly with the reader using a Bluetooth connection, the blue light on the scanner will turn off.



Bluetooth Connection Name Settings

1. Have the barcode of the Bluetooth name you want to set. The barcode data format [BT:xxxx], xxxx represents the Bluetooth name, and the character length of the Bluetooth name does not exceed 16 characters.
2. For example, if you want to set the Bluetooth name as "BTscanner", you should find a barcode generator and create a barcode with the content [BT:BTscanner].
3. Scan the generated Bluetooth name barcode. Search for the devices again and the Bluetooth name will be changed to "BTscanner".

Beep settings

 <p>Loud beep (default)</p>	 <p>Average beep volume</p>
 <p>Low beep volume</p>	 <p>Beep off</p>

Vibration settings


 <p>Vibrate On (Default)</p>	 <p>Vibration off</p>
----------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------

Auto-off settings

Scan the barcode below to set the time it takes for the scanner to automatically shut down.



Shut down after 10 minutes



Shut down after 20 minutes (default)




No automatic shutdown

The barcode can also be used to set an individual switch-off time. Barcode format "[SHUT:xxx]", where xxx represents the shutdown time between 5-120 minutes, for example: set the idle time to 5 minutes -the barcode content is [SHUT:5].

Prefix and Suffix Settings

- 1. A barcode to set a prefix or suffix can be generated by the barcode generation tool. The Prefix barcode should be in the format "[PREFIX: xxxxx]" or the suffix "[SUFFIX: xxxxx]", where xxxxx is the prefix and suffix of the characters to be set, it can be a maximum of five characters.
- 2. For example, if you want to set the prefix "AB", you need to create a barcode that says "[PREFIX:AB]". If you want to set the suffix "CD", you need to create a barcode that says "[SUFFIX:CD]".

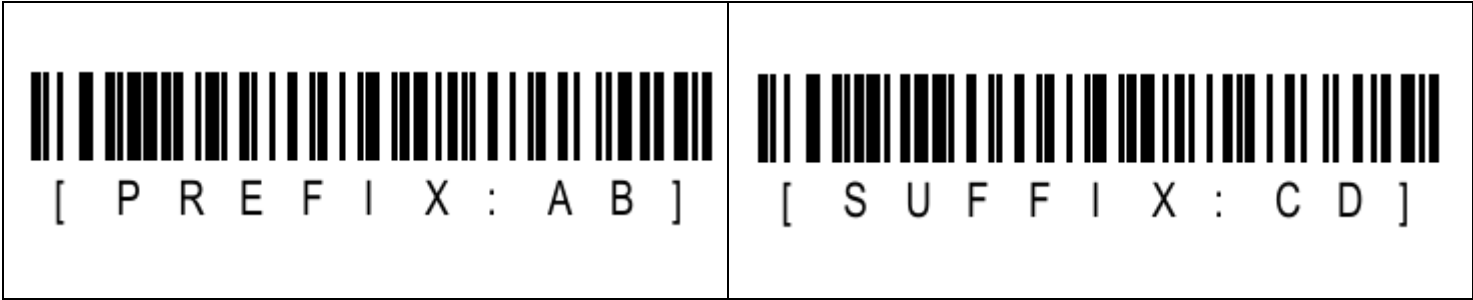

- 3. Scan the generated prefix/suffix character barcode. When scanning barcodes, the set prefix/suffix will be added to them.

Endpoint settings

 <p>Addition of CR</p>	 <p>Dodanie CR + LF</p>
 <p>Adding a TAB</p>	 <p>Cancel added trailing characters</p>